

# imc STUDIO 5.2

Getting Started

Doc. Rev.: 4.13 - 2021-03-03





---

## Foreword

Thank you for deciding to purchase our product. We wish you total success in accomplishing your measurement assignments with the help of your hardware and software. If you have any open questions about our products, please contact our Hotline ([hotline@imc-tm.de](mailto:hotline@imc-tm.de)).

## Disclaimer of liability

The contents of this documentation have been carefully checked for consistency with the hardware and software systems described. Nevertheless, it is impossible to completely rule out inconsistencies, so that we decline to offer any guarantee of total conformity.

We gratefully accept any suggestions for improvements, please contact our Hotline ([hotline@imc-tm.de](mailto:hotline@imc-tm.de)).

We reserve the right to make technical modifications of the systems.

## Copyright

© 2021 imc Test & Measurement GmbH, Germany

This documentation is the intellectual property of imc Test & Measurement GmbH. imc Test & Measurement GmbH reserves all rights to this documentation. The applicable provisions are stipulated in the "imc Software License Agreement".

The software described in this document may only be used in accordance with the provisions of the "imc Software License Agreement".

## Open Source Software Licenses

Some components of imc products use software which is licensed under the GNU General Public License (GPL). Details are available in the About dialog.

A list of the open source software licenses for the imc measurement devices is located on the imc STUDIO/imc WAVE installation medium in the folder "*Products\imc DEVICES\OSS*" or "*Products\imc DEVICEcore\OSS*". If you wish to receive a copy of the GPL sources used, please contact our Hotline.

# Table of Contents

<b>1 General Notes</b>	<b>6</b>
1.1 Before you Start	6
1.2 Notes / Quality Management	6
1.3 imc Customer Support / Hotline	7
1.4 Documentation - Help	7
1.5 imc Software License Agreement	8
<b>2 Overview</b>	<b>11</b>
<b>3 Setting Up - Software</b>	<b>12</b>
3.1 System requirements	12
3.2 Installation - Preparation	13
3.2.1 Update with the help of the existing database	15
3.2.2 Update without using the existing database	15
3.2.3 Notes and Troubleshooting	16
3.3 Installation Step by Step	17
3.3.1 Demo and Auto	20
3.3.2 User-defined	21
3.3.3 Starting the Installation	25
3.4 Product Configuration / Licensing	26
3.5 Start	28
3.5.1 Device Connection / Network / Firewall	30
3.5.2 Main Windows / Plug-ins	31
3.5.3 Important Settings	32
3.6 Info / Version Information	32
3.7 Information and Tips	33
3.7.1 Changing Languages and Installing Additional Languages	33
3.7.2 Recommended Virus Scanner Settings	34
<b>4 Setting Up - Connect the device</b>	<b>35</b>
4.1 Connection via LAN	35
4.2 Connecting via LAN in four steps	36
4.3 The Network	40
4.4 Firmware Version	42
4.4.1 Firmware Update	43
<b>5 Experiments, Projects and the Database</b>	<b>47</b>
5.1 Dialogs: Project and Experiment	50
5.2 Creating/Saving an Experiment	52
5.3 Experiment Templates	52
<b>6 Ribbon</b>	<b>54</b>
6.1 Project Menu	54
<b>7 Navigation Pane and Quick Access Toolbar</b>	<b>56</b>
<b>8 Tool Windows</b>	<b>57</b>
8.1 Operation	57
8.2 Logbook	59
<b>9 Views</b>	<b>60</b>

9.1 Exporting/importing views ..... 61

**Index ..... 65**

# 1 General Notes

## 1.1 Before you Start

Dear user.

1. The software you have obtained, as well as the associated manual are directed toward competent and instructed users. If you notice any discrepancies, we request that you contact our [Hotline](#)<sup>[7]</sup>.
2. Updates during software development can cause portions of the manual to become outdated. If you notice any discrepancies, we request that you contact our Hotline.
3. Please contact our Hotline if you find descriptions in the manual which you believe could be misunderstood and thereby lead to personal injury.
4. Read the enclosed [license agreement](#)<sup>[8]</sup>. By using the software, you agree to the terms and conditions of the license agreement.

## 1.2 Notes / Quality Management

### Quality Management



imc Test & Measurement GmbH holds DIN-EN-ISO-9001 certification since May 1995. You can download the CE Certification, current certificates and information about the imc quality system on our website: [www.imc-tm.com/quality-assurance/](http://www.imc-tm.com/quality-assurance/).

### imc Warranty

Subject to the general terms and conditions of imc Test & Measurement GmbH.

### Product Improvement and change requests

Please help us to improve our documentation:

- What terms or descriptions are incomprehensible?
- What additions and enhancements you suggest?
- Where have material mistakes slipped in?
- Which spelling or typing errors have you found?

Responses and other feedback should be directed to the [Hotline](#)<sup>[7]</sup> (phone / e-mail) or by writing to: imc Test & Measurement GmbH, Voltastrasse 5 in 13355 Berlin, Germany

## 1.3 imc Customer Support / Hotline

If you have problems or questions, please contact our Customer Support/Hotline:

### imc Test & Measurement GmbH

Hotline (Germany): **+49 30 467090-26**

E-Mail: [hotline@imc-tm.de](mailto:hotline@imc-tm.de)


Internet: [www.imc-tm.com](http://www.imc-tm.com)

### International partners


For our international partners see [www.imc-tm.com/distributors/](http://www.imc-tm.com/distributors/).

### Tip for ensuring quick processing of your questions:

If you contact us **you would help us**, if you know the **serial number of your devices** and the **version info of the software**. This documentation should also be on hand. Thank you!

- The device's serial number appears on the nameplate.
- The program version designation is available in the About-Dialog (click on the symbol  in the menu bar).

## 1.4 Documentation - Help

All imc STUDIO products come with **help** (CHM or EXE format). In the menu bar, click on the symbol  to open the help. The help may also contain parts shared imc software components. These parts may differ from the rest of the help in terms of style and structure. All help files are equipped with a full text search functionality and have an index.



### Note

### Notes on the descriptions and the screenshots

The screen shots appearing in this documentation were created with a variety of Windows versions and their appearance may thus differ from that of your installed program.

imc STUDIO works with user groups and access rights. The user group has wide-reaching influence on the visibility and/or operability of menus, icons, etc. Note that in all imc STUDIO documents the administrator roll is assumed to be filled. All descriptions are therefore related to the full utilization of the user interface.

The following descriptions and screenshots always pertain to the view with the full scope of functions (**Complete**). Many of these functions are also found in the minimized view at another location.

## 1.5 imc Software License Agreement

imc Test & Measurement GmbH  
Voltastrasse 5  
13355 Berlin  
Commercial register: Berlin-Charlottenburg HRB 28778  
Managing director: Kai Gilbert, Ralf Winkelmann

**imc Test & Measurement GmbH**  
**Terms and Conditions**  
**Governing the Use of imc Test & Measurement GmbH Software**  
**As of: January 10, 2020**

### § 1 Objects of the Agreement

- (1) In addition to the "General Terms and Conditions Governing imc Test & Measurement GmbH Deliveries and Services to Customers", these terms and conditions apply to all contracts concluded with imc Test & Measurement GmbH (hereinafter referred to as "imc") which involve the transfer of rights of use to any software developed by imc (standard software, software created or adjusted specifically for the Customer, which is recorded on the machine-decodable data carriers such as data files, databases and database material, updates, upgrades, releases, etc., including corresponding documentation, information and materials, hereinafter referred to as "Software").
- (2) The Software is provided to the Customer as an executable object program on machine-decodable data carriers specified in the "Objects of the Agreement". The Software's product documentation is also supplied to the Customer either in print or on a machine-decodable data carrier. Unless otherwise expressly agreed in writing, the Customer is not issued the source code of the Software.

### § 2 Rights of Use, Scope

With regard to any transfer of rights of use to Software created by imc, the following provisions apply:

#### (1) Basic provisions

- a) The Customer is granted a non-exclusive and – subject to the terms and conditions governing the use of Software by third parties, resale and leasing – non-transferrable right of use to the Software for its own purposes. "Use" signifies running the programs and editing the data records.
- b) Until each due fee is paid in full, the Customer is entitled to use the Software solely on a revocable basis. If the Customer is in default with regard to the payment of fees, imc is entitled to revoke the use of the respective services for the duration of the default. The Customer is granted the permanent right to use copyright protected services, in particular the Software, only upon full payment of the agreed fee.
- c) The Customer agrees to undertake appropriate precautionary measures to prevent unauthorized access by third parties to the Software. The original data carriers and the data carries used to make copies as per the agreement, as well as the documentation, are to be stored in a secure location. Employees are to be notified that the production of copies beyond the scope of the agreement is not permitted.
- d) If the right of use is revoked or expires due to another reason, the Customer is obligated to return to imc the Software, the copies made by the Customer and the documentation. Provided that a physical return of the Software and the copies is not possible due to technical reasons, the Customer is obligated to delete such and confirm deletion to imc in writing.

#### (2) Reproduction

- a) The Customer is entitled to make copies of the Software only if copies are necessary to use the Software in accordance with the contract. The following are considered cases in which reproduction is necessary: installation of the Software from the original data carrier onto the hard disk drive of the hardware used, as well as loading the Software into the computer memory.
- b) The Customer is entitled to create a backup copy if such is necessary to safeguard future use. Copies may only be made for other purposes after prior written consent has been issued by imc.
- c) The Customer is not allowed to make any reproductions other than those expressly permitted under the provisions of this agreement.



### (3) Use of the Software by Third Parties, Resale and Leasing

- a) The Software may be used for the purposes stipulated in this contract, in particular for the Customer's business operations. Access to the Software may also be provided to parties which rely on using the Software as instructed by the Customer. In particular, the Customer is entitled to operate the Software or allow the Software to be operated on data processing devices, which are located on the premises of and are directly owned by a third party company (outsourcing). The prohibition against multiple use remains unaffected.
- b) The Customer may permanently sell or give the Software to third parties provided that the Customer is granted permanent use of the Software. In the context of its period of use, the Customer may temporarily transfer the Software to third parties for a fee or free of charge. The prohibition against multiple use remains unaffected. The Customer is expressly notified that transfer to third parties is not permitted and use by third parties is technically not possible if an individual license must be acquired or an individual activation is required for third party usage, such as in the case of runtime licenses.
- c) With regard to the valid use of Software by a third party, the Customer is obliged to ensure that the third party acknowledges the provisions of this agreement governing the rights of use as binding for such third party. The Customer may not transfer Software and documentation to third parties if there are grounds to suspect that the third party may infringe upon the provisions of this agreement governing the rights of use, in particular with regard to the unauthorized production of copies.
- d) Subject to the provisions stipulated in § 4 Paragraphs 1 and 2 or a deviating express agreement in writing, the Customer may not use the Software while the Software is being used by a third party (prohibition against multiple use); in the event that the Software is transferred to the third party, the customer is obliged to surrender to imc all Software copies including, if applicable, all existing backup copies, or to destroy copies not surrendered.

### (4) Decompilation

The reverse translation of the provided program code into other code forms (decompilation), disassembling and other forms of reverse engineering of the various production phases of the Software is not permitted. If interface information is required to achieve the interoperability of a separately created computer program, such may be requested from imc, or a third party to be named by imc, for a minor fee. Section 69 e of the German Copyright Act ("UrhG") remains unaffected by this provision.

### (5) Changes by imc

If imc conducts adjustments, changes or enhances the Software on behalf and on account of the Customer, the Customer thus acquires the corresponding rights of use to the changes or enhancements of the Software to which he is entitled according to the stipulations of this agreement.

### (6) Exceptional Usage Requests by the Customer

If the Customer requests to use the Software according to terms which deviate from the requirements stipulated in Paragraphs 2 through 5, this exceptional use of the Software must be agreed in writing by imc. In such an instance, the Customer agrees to provide imc with information about the desired scope of use, the pertinent field of application, etc. If imc subsequently grants a license covering the Customer's special intended use, the parties agree that a new license fee is owed by the Customer, which is independent of payments made by the Customer for the previously existing license.

## **§ 3 Copyright, Protection of the Software**

- (1) The intellectual property, in particular the copyright as well as all industrial property rights and trade secrets, are retained by imc and are not transferred to the Customer. The Customer's ownership of the machine-decodable data carries and data processing units remains unaffected.
- (2) Copyright notices, serial numbers as well as designations and reservations of rights which serve as program identification or a protective right may not be removed or changed. The Customer is obliged to transfer the existing protective right notices to all copies. In particular, backup copies of the Software must be expressly designated as such.

#### **§ 4 License Types, Multiple Use**

- (1) In the case of a Single-User License, the Software may be activated and run on only one data processing unit. "Activation" refers to the process of transferring the license to the data processing unit.

If the technical specifications for the Software permit a second activation, then the Customer may additionally activate the Software on a second data processing unit. However, the Software may only run on one data processing unit at any one time, not on both simultaneously.

- (2) With a Network License, the Software may be run on as many data processing units as the amount of licenses obtained. In this case a central data processing unit acts as the license server for which the activation process is performed.

If the technical specifications for the Software permit a second activation, then the Customer may additionally activate and run the Software on as many data processing units as the amount of licenses obtained. However, these additional data processing units must be used by the same users who operate the Software via the license server.

- (3) Subject to the provisions in Paragraphs 1 and 2 or a deviating express agreement in writing regarding network use, multiple use of the Software is not permitted.

- (4) If the data processing unit is changed, the Customer is obliged to delete the Software from the hard disk drive of the previously used hardware.

#### **§ 5 Trial Version**

If the Software used is a free trial version, then the following additional limitations apply:

- (1) The trial version only entitles the user to test the Software. In particular, commercially productive utilization is not permitted.
- (2) The rights of use granted expire after the elapse of a period stated in the product description.

#### **§ 6 License Key**

- (1) Upon delivery of the Software the Customer receives a License Key. Using this License Key, the Customer is able to activate the Software purchased. By means of this License Key the Customer can also view his license status and order updates and upgrades.

- (2) The License Key is to be protected against access by third parties in order to prevent misuse. If, however, a third party gains unlawful access to the Key, the Customer is obliged to notify imc immediately via telephone, as well as in writing, so that the previous License Key may be suspended and a new one issued.

#### **§ 7 Conclusion**

- (1) The law of the Federal Republic of Germany shall apply under exclusion of private international law. The provisions of the UN Convention on Contracts for the International Sale of Goods (CISG) do not apply.

- (2) The place of performance for all obligations arising from this agreement is imc's registered seat. Insofar as the Customer is a merchant as defined by the German Commercial Code (HGB), a legal entity under public law, or a special asset under public law, the exclusive place of jurisdiction for all disputes directly or indirectly arising from the contractual relationship is agreed as imc's registered seat. The same applies to persons who have no general place of jurisdiction in Germany, as well as to persons who have moved their place of residence or usual whereabouts abroad since conclusion of the contract, or whose place of residence or usual whereabouts is unknown at the time the action is filed. In addition, imc is entitled to file suit at the statutory venue.

- (3) Oral side-agreements are not valid. Deviating or supplementary conditions as well as modifications of this contract, including this written requirement clause, are only valid if agreed in writing and expressly marked as a modification or supplement.

- (4) If certain provisions of this contract are inoperative or unfeasible, this does not prejudice other provisions of the contract. The contracting parties agree to contractually substitute an operable provision which approximates the commercial intention of the contract as closely as possible for any inoperable one.

## 2 Overview

This document describes the **first steps in operating imc STUDIO** and the installation of additional imc products. This document uses textual references to the product documentation.

imc STUDIO is the common framework forming a **product package** through the combination of modular components (plug-ins).

Which components are available depends on the product installation (order).

### Chapter overview

Synopsis	Chapter
Startup operations for imc STUDIO - <b>installation</b> and <b>product configuration</b> prior to first use	<ul style="list-style-type: none"> <li>• <a href="#">System requirements</a> <sup>12</sup></li> <li>• <a href="#">Installation / Uninstall</a> <sup>13</sup></li> <li>• <a href="#">Product Configuration / Licensing</a> <sup>26</sup></li> <li>• <a href="#">The first start</a> <sup>28</sup></li> <li>• <a href="#">Device connection / Network / Firewall</a> <sup>30</sup></li> </ul>
The first steps in <b>connecting with the device</b>	<ul style="list-style-type: none"> <li>• <a href="#">Setting Up - Connect the device</a> <sup>35</sup></li> <li>• <a href="#">Firmware Version</a> <sup>42</sup></li> </ul>
Data storage: How are <b>data stored</b> and loaded	<ul style="list-style-type: none"> <li>• <a href="#">Experiments, Projects and the Database</a> <sup>47</sup></li> <li>• <a href="#">Ribbon "Project": Open / Save experiments</a> <sup>54</sup></li> </ul>
<b>Navigation through</b> the entire <b>software</b>	<ul style="list-style-type: none"> <li>• <a href="#">Navigation Pane</a> <sup>56</sup></li> </ul>
The <b>software user's interface</b> is flexible. Saving and restoring of views	<ul style="list-style-type: none"> <li>• <a href="#">Saving / Loading views</a> <sup>60</sup></li> </ul>

### Customer Support - Hotline

Questions or problems? Contact our [Customer Support / Hotline](#) <sup>7</sup>.

## 3 Setting Up - Software

### 3.1 System requirements

#### Supported operating systems

Windows 10\*

Windows 8.1

\*released in conformance with the version of Windows 10 applicable at build date of imc software

Minimum requirements for the PC <sup>1</sup>	Recommended configuration for the PC <sup>2</sup>
Hyper-threading or Dual Core processor with 2 GHz clock speed	Quad Core processor with 2 GHz clock speed or higher
2 GB RAM (32 bit) / 4 GB RAM (64 bit)	3 GB RAM (32 bit) / 8 GB RAM (64 bit)
10 GB free hard disk space (NTFS format)	10 GB free hard disk space (NTFS format)
Display resolution 1280 x 768	Display resolution: 1280 x 1024 or more
	64 bit operating system

- 1 A system with minimum requirements is not adequate for connection with multiple devices and complex design tasks with the imc STUDIO Developer. Use such systems preferably only for data monitoring purposes.
- 2 The requirements for the PC's configuration increase with the number of devices involved and the scope of the Data Processing-calculations to be performed.

### Supported Measurement Devices

Which devices you can use in imc STUDIO is described in the documentation on the "*Setup*" > "*Device Overview*", as well as in the "*Technical Data Sheet*". For the purpose of connecting with imc STUDIO Monitor, the devices must additionally have at least **32 MB of internal (interface) device memory** available (which is assured for all current device models, except for a limited number of imc CRONOS-PL and imc CRONOS-SL devices dating back to before 2007).

## 3.2 Installation - Preparation

### Software requires a license

This means that the program may only be started **upon obtaining a license** (see [Product Configuration / Licensing](#)<sup>26</sup>).

### Administrator rights required

For the purposes of installation and uninstallation, a user account with **administrator privileges for the PC is required**.

If you are logged on to the PC **without administrator rights, log yourself out** and log back on with an administration-level user account. If you don't possess the appropriate account type, you will need the support of your system administrator or IT department.

See also [Notes on Windows User Account Control](#)<sup>16</sup>.

### Restarting the computer in the process of installation

During the installation process, the installation program will prompt you to restart the PC.



#### Note

#### Restarting

After the restart, login to **the same user account** with which you had previously begun the installation.

### Coexisting applications: imc STUDIO, imc STUDIO Monitor, imc WAVE, ...

Some imc programs are installed as an independent and specially adapted instance of imc STUDIO. They are based on imc STUDIO.

Unless otherwise stated, these programs are installed and used in parallel. As long as these instances are based on the same version of imc STUDIO (e.g. 5.2R1), they are all subordinated to the same program installation, which means they share resources.

For this reason, installation of the instances in this case must be performed in one single shared Setup procedure. Any attempt to perform installation in succession or subsequently will cause the already existing instances to be deleted.

This applies particularly to the joint and parallel installation of imc WAVE and imc STUDIO, which must be performed in a single step.

Do not install imc STUDIO and imc WAVE in succession, but always at the same time.

### Update or parallel installation

The Setup utility checks whether any version of imc STUDIO is currently installed on the computer. If so, it can be uninstalled by means of the Setup. An associated confirmation prompt is posted in that case. All user data such as the database remain intact.

You can keep **both versions installed in parallel**, as long as the version numbers are different (e.g. 5.0 and 5.2). The new version can be installed in the same folder (default case: "C:\Program Files (x86)\imc" for 64-bit Win10). In this folder, a new subfolder with the new version number is created for imc STUDIO.

In both cases, you are able to **adopt** a variety of **settings** from the old versions. These include the project settings and views. By contrast, other settings such as the product configuration and the database path need to be set up from the beginning.

### Adopting the settings with the help of the existing database (recommended)

If you wish to continue using the existing database, the possible settings will be adopted. For a parallel installation, two data bases are needed. Create a copy so that the old imc STUDIO version can continue to work with the existing database. A confirmation prompt about making a copy is posted.

See: [Update with the help of the existing database](#) <sup>15</sup>.

### Adopting the settings without using the existing database

You can apply the settings, such as the views, without using the database. To do this, save and import the appropriate settings.

See: [Update without using the existing database](#) <sup>15</sup>.

Please also observe the **notes regarding the update and compatibility** on our [website](#) <sup>7</sup> under FAQ!

## The subsequent procedure - an overview

Follow the installation program instructions (see: "[Installation step by step](#)" <sup>17</sup>).

- The installation process first checks whether the **required system software** is installed. If ones is missing, it will be installed automatically.
- After restarting the system, the selected products are installed.
- After the installation is concluded, it is possible to start imc LICENSE Manager directly to activate your license.
- Once the license has been activated, you can use the products.

## Uninstalling

To uninstall the product, use the Windows Control Panel/Settings and select the respective entry:

- "Control Panel" > "Programs" (Uninstall a Program) (Windows 7)
- "Settings" > "Apps & features" (Windows 10)



### Reference

### See also

- [Recommended Virus Scanner Settings](#) <sup>34</sup>
- [Changing Languages and Installing Additional Languages](#) <sup>33</sup>

### 3.2.1 Update with the help of the existing database

If you continue to use the existing database, whatever settings are possible will be adopted. This includes Views, any Setup-columns created by the user, the user administration and all experiments.

If you wish to run multiple versions of imc STUDIO or maybe restore an older version at a later time, create a copy of the database.



Note

The database

**It is impossible to use the imc STUDIO database by both versions in parallel.**

- If the same path is selected in the new imc STUDIO version, the database is used automatically. When loading old experiments, a note is posted in the logbook that the **experiments belong to an older version. Once saved, they can no longer be loaded** with the old version.
- If the database structure has been altered, you will be notified of this. A **dialog for performing conversion** appears. There you can convert the database or have it copied beforehand. After the conversion, the entire **database can no longer be used with the old version.**



Note

Using new views

- Be aware that the new version provides new functions, such as new or enhanced Setup pages and new menu items.
- **Use of the new Views is recommended, in order for these new functions to be accessible! Please look under "What's new" whether there have been any changes in this regard.**
- User-made columns such as meta data columns are not automatically inserted into the pages. The configurations of these columns, however, is adopted from the old View. You can re-insert these columns at the desired position (by means of the Column Chooser).
- Multiple views are provided. Select a view and add whatever Setup pages are required or saved, and save the view under a new name.
- How to save Views is explained in the imc STUDIO documentation under "[Views](#)".

### 3.2.2 Update without using the existing database

In imc STUDIO, various settings were saved with the respective **project** and apply to all the experiments it contains. Among other things, these include the view settings: user-defined views, column configurations (e.g. metacolumns).

In order to **retain these settings** in the new version after having **performed the update** without using the existing database, export of the settings are necessary.


Please first check which settings you will need.

- If you wish to reuse **all of the project's settings**, export the project settings (by means of the Projects-dialog: Menu ribbon: "*Project*" > "*Manage Project*").
- If you wish to reuse **only the viewing settings**, [export the views](#).

## 3.2.3 Notes and Troubleshooting


### Notes on Windows User Account Control

#### Do not change the user account

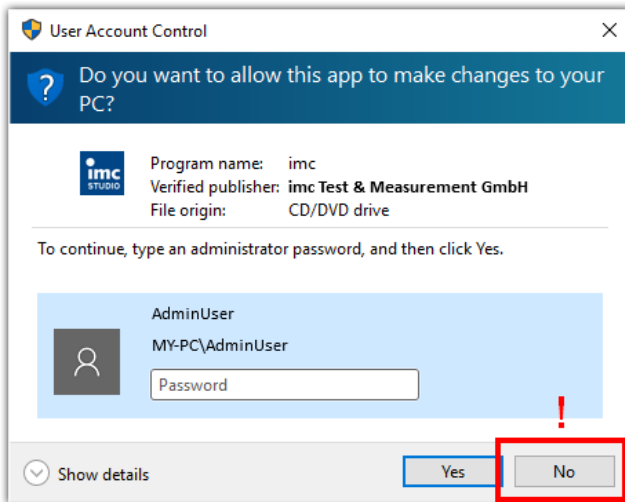


Example of a password request.  
Select "No".

With Windows, installation can be started without administrator rights. In this case, the operating system requires selection of a user account and associated password, as shown in the example below.

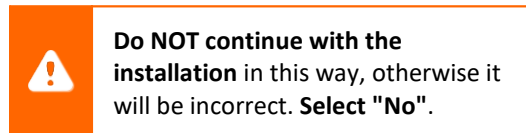

#### Confirm the prompt by the user account control

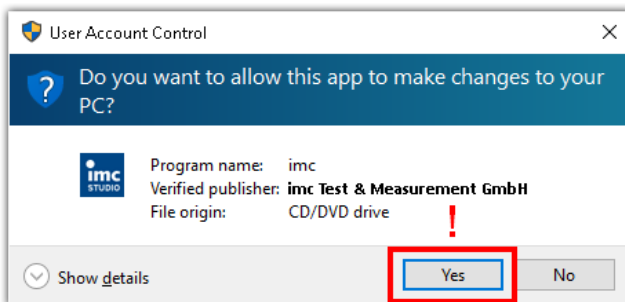

Select "Yes", to start the installation.

When you are logged in to a user account possessing administrator rights, you may receive a prompt by the Windows User Account Control (UAC) to allow changes. Select "Yes" as shown below.

### Notes on the security software

Some virus scanners **prevent correct installation** of imc programs. We are currently aware of this affecting products from the companies McAfee and ESET. In principle, almost any virus scanner can have settings possibilities which prohibit necessary functions during installation.

For installation purposes, certain steps are necessary, such as:

- registration of programs for Autorun
- registration of programs as a service
- running of scripts from the TEMP-folder
- ...

The error profile may include various messages during installation. Or installed programs failing to launch.

In such cases, please contact your administrator to find out whether certain rules can be suspended for the duration of the installation. For any further questions, please contact our [Hotline](#) <sup>71</sup>.



## 3.3 Installation Step by Step

Actual texts appearing in the user interface may differ from those shown in the screen shots, depending on the product configuration (path/version name).


### Installation from the product DVD

- Close all programs.
- Insert the product DVD.
- In usual cases, the Setup program will automatically start after a brief delay. Otherwise use the Windows Explorer and start the installation program from the DVD.

### Installation after Download

- If you have obtained the product electronically (download, Email), simply start the installation program manually.


### Installation language settings

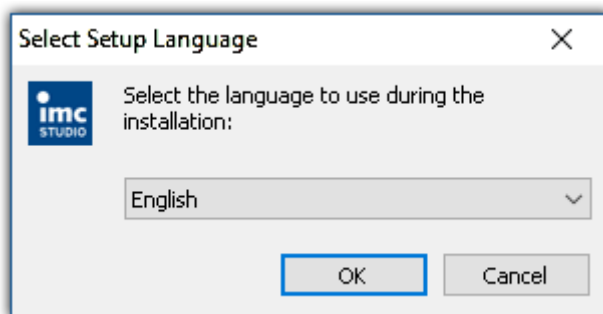

Selecting the language during installation


When you start the installation, you first see a dialog for selecting the installation language.

### Performing installation

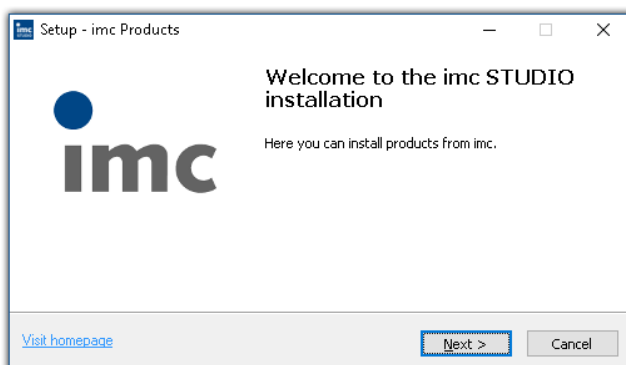

Installation setup welcome page


Once you have selected the language, the installation setup starts with a welcome page:

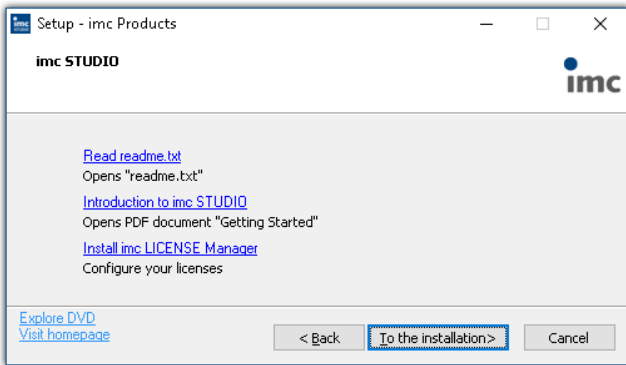

Before starting installation


On the installation setup's next page, you are offered the following choices:

- open the "Readme"-file,
- open the "Getting Started"-document,
- separate installation of imc LICENSE Manager and
- display of the DVD contents.

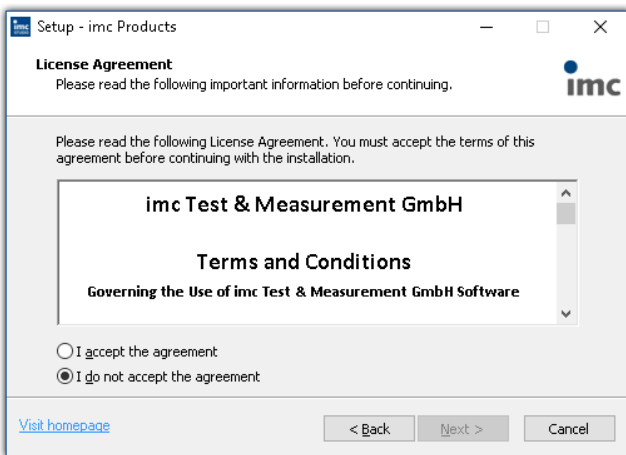

License agreement

You must accept the license agreement to continue the installation.

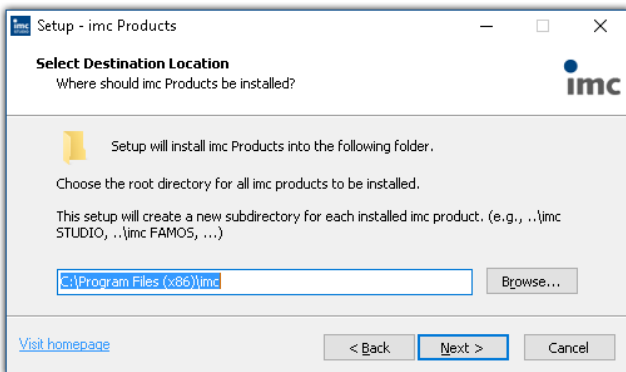

Entering the installation path

In the next step, select the file path where the products should be installed. For each imc product, a separate subfolder is created in this path (e.g. imc STUDIO 5.2). Therefore it is recommended that the path should end with "..\imc".

## Select the products / Installation type

Now you can select which components should be installed. There are three types available:

- [Demo](#) <sup>20</sup>
- [Auto](#) <sup>20</sup>
- [User-defined](#) <sup>21</sup>

However independent from the selected installation type the products that are always included are:

- imc LICENSE Manager for managing the licensing, and
- imc Shared Components, providing common components of the imc products, such as the curve window.

Details on the types and the respective subsequent installation steps are provided in the associated sections below.



### Note

### Note on re-configuring imc STUDIO

Regardless of which variant of the installation is selected, when imc STUDIO is installed, all components/plug-ins are included. This way, after successful installation it is possible to adapt the configuration at any time by means of the [product configuration](#) <sup>26</sup> and to select the appropriate edition.

*"User-defined"* gives you the ability to affect all installation settings.

### 3.3.1 Demo and Auto

The installation types **Demo** and **Auto** are only slightly different. For both types the installation settings are already configured. If you need further settings please choose the [user-defined installation type](#) <sup>[21]</sup>.

The imc STUDIO edition and the necessary components/plugin-ins can be adapted at any time subsequent to successful installation by means of the [product configuration](#) <sup>[26]</sup>.

Installation: Demo	Installation: Auto
Use the installation type "Demo" in order to test the full scope of imc STUDIO for 30 days. No other products which require a password will be installed.	Use the installation type "Auto" in order to install the standard imc STUDIO edition including all necessary components. Optionally, the password-protected sensor management system imc SENSORS is installed.

The installation type is installed along with imc Shared Components and imc LICENSE Manager:

Installation: Demo - Components	Installation: Auto - Components
imc STUDIO Developer (Demo) <sup>1</sup>	imc STUDIO Standard <sup>2</sup>
imc DEVICES <sup>3</sup>	imc DEVICES <sup>3</sup>
imc FAMOS Reader <sup>4</sup> + Enterprise (Demo)	imc FAMOS Reader <sup>4</sup>
imc Format Converter	imc Format Converter
	optionally imc SENSORS <sup>5</sup>

#### Installation: Demo - Description

- 1: The associated Demo license must be activated after concluding installation by means of imc LICENSE Manager, otherwise it is not possible to start imc STUDIO.

Once the demo trial period has elapsed, use the [product configuration](#) <sup>[26]</sup> to convert the edition to the license you have purchased.

- 3: As a package of device drivers and firmware used by imc STUDIO.
- 4: The imc FAMOS Reader is freeware which also needs to be registered using imc LICENSE Manager.

#### Installation: Auto - Description

- 2: The edition imc STUDIO Standard requires the purchase for license.

The associated license must be activated after concluding installation by means of imc LICENSE Manager, otherwise it is not possible to start imc STUDIO.

- 5: Optionally, imc SENSORS is installed, which is a tool for administering sensors. This product requires a password for installation. If you do not wish to install imc SENSORS, you can de-select it.

Installation start follows directly (see: "[Starting the installation](#)" <sup>[25]</sup>).

## 3.3.2 User-defined

This installation type enables the user to choose a detailed configuration. Based on your selection of components desired, different installation steps are displayed.



### Note


### Who should select User-defined installation

Use the installation type User-defined if you wish to **configure the individual products**.

With this type, it is possible to install **password-protected components**. Further, you can install and configure additional imc products such as **imc FAMOS**.

Note that some components can require a separate license.

## Selecting components

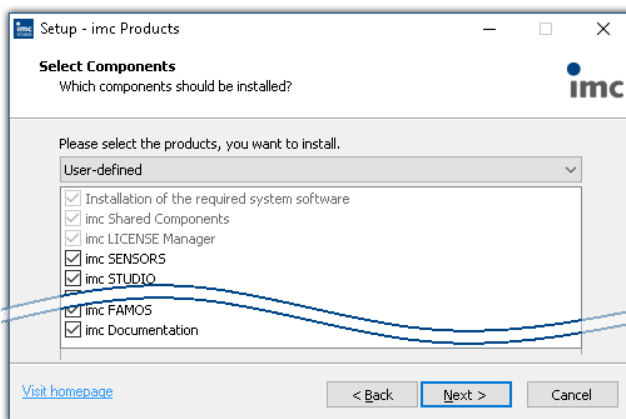


Selecting User-defined installation

Once you have selected the installation type "User-defined", it is possible to select/de-select the desired components in the box at the bottom.

imc LICENSE Manager and imc Shared Components are included, as well as the **necessary system component**, otherwise the installed products will not function properly.

Selection	Description
Required system components	System components require using of imc products.
imc LICENSE Manager	imc LICENSE Manager enables the display and activation of all imc software products requiring a license.
imc Shared Components	Shared components of the imc products, such as the curve window.
imc SENSORS	imc SENSORS is a turnkey database program applicable across different measurement devices, for administering and editing freely definable sensor information.
imc STUDIO	imc STUDIO is modular software platform handling all aspects of modern measurement technology from simple data acquisition to sophisticated test configurations.
imc STUDIO Monitor	License-required component for imc STUDIO
imc WAVE	imc WAVE is a software package for NVH (Noise Vibration and Harshness) analysis. It is based on imc STUDIO and is installed as a separate instance of imc STUDIO. It can be equipped with multiple, separately licensed analyzers.
Firmware and driver package imc DEVICES	Package of device drivers and firmware required by imc STUDIO and imc WAVE for imc devices.
imc FAMOS	imc FAMOS is a program for analyzing, evaluating and documenting measurement results.
imc Format Converter	Converts imc measurement data to other formats such as EXCEL and ASCII.


## Required system components

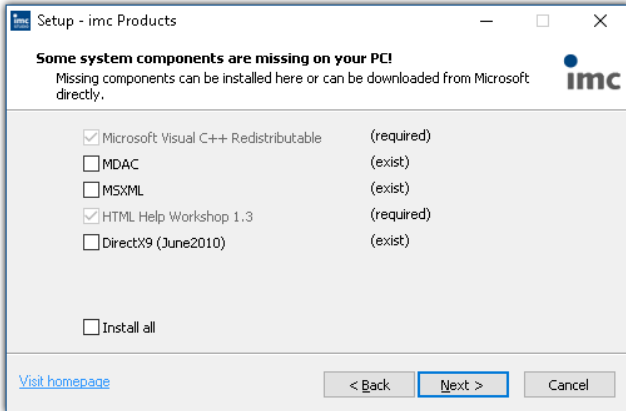

Required system components (example)

In the next step, the system components which the products selected require are displayed, along with a note about which are already installed on your system. It is also possible to re-install any already installed components. Which components are missing/present depends on the system and its update status, so that the illustrations below are intended as an example only.

## Configuring imc Shared Components

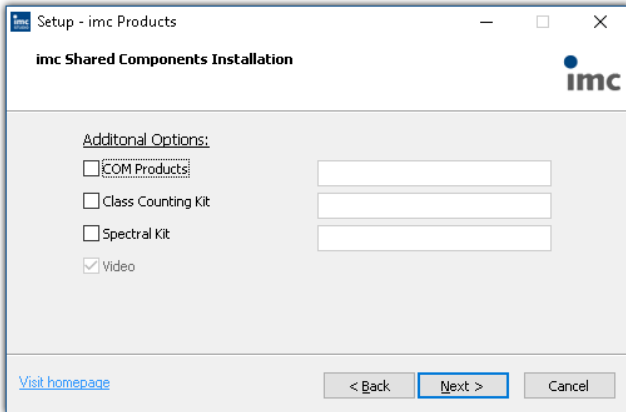


Configuring imc Shared Components

In this installation step, it is possible to install password-protected components of imc Shared Components.

Option/Component	Description
COM Products	The imc COM programming interface is a system integration tool
Class Counting Kit	Function library for imc COM products
Spectral Kit	Function library for imc COM products


## Password for imc SENSORS

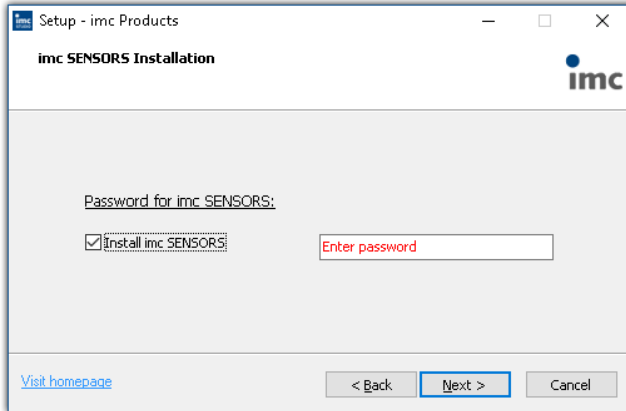

Password prompt for imc SENSORS

If you have selected imc SENSORS, you are prompted to enter the password prior to installation. But if you do not wish to install imc SENSORS, de-select it here.

## Configuring imc STUDIO

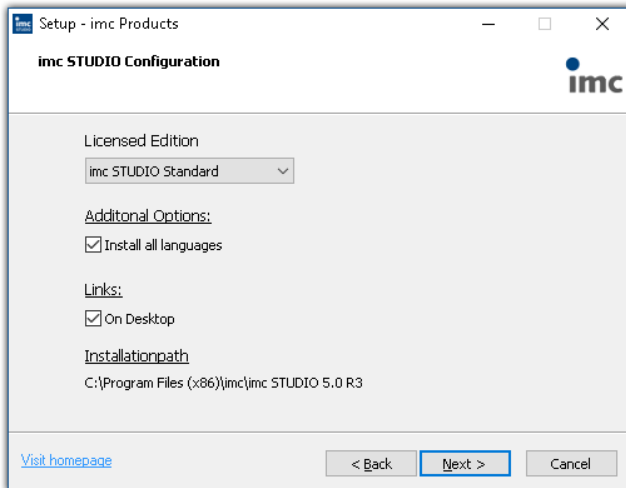


Configuring imc STUDIO

It is possible to make settings for your licensed product edition here. In consequence, later [product configuration](#)<sup>26</sup> can be omitted.

Option/Component	Description
Licensed edition	Information on the editions is provided in the <b>Technical datasheet</b> for imc STUDIO.
Install all languages	This option installs imc STUDIO in all available languages. If you do not need any extra languages, you can shorten the installation process.  Please note that some functions require other languages. E.g. foreign-language parameter sets can only be imported if the corresponding language is installed.  If the option is de-selected, then English and the operating system's language (if available) are installed automatically. If desired, all other supported languages can be installed later (see section " <a href="#">Installing additional languages</a> " <sup>33</sup> ).
Links	Program starting links can be created on the Desktop.

## Configuring imc DEVICES

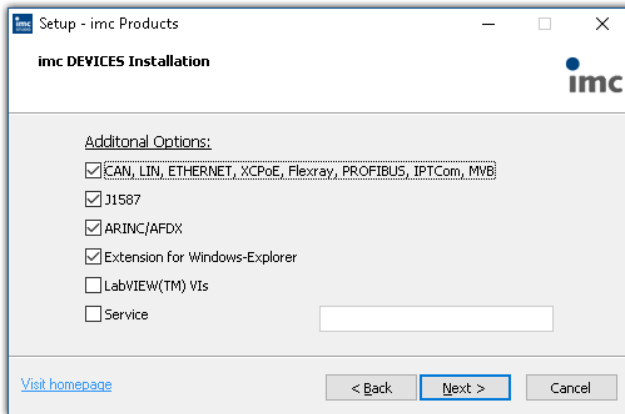


Here, you can install optional components of the imc DEVICES device driver package, which are used by imc STUDIO and imc WAVE.

Configuration imc DEVICES

Option/Component	Description
CAN, LIN, ETHERNET, XCPoE, Flexray, PROFIBUS, IPTCom, MVB	For measurement devices with one of these Fieldbus terminals
J1587	For measurement devices with a J1587-Bus terminal
ARINC/AFDX	For measurement devices with a ARINC- or AFDX-Bus terminal
Extension for Windows-Explorer	Access to the device hard drive via the MS Windows-Explorer
LabVIEW(TM) VIs	Library for accessing the imc devices via LabVIEW(TM)
Service	Service support. Install this component only if requested by Customer Support.

## Configuring imc FAMOS

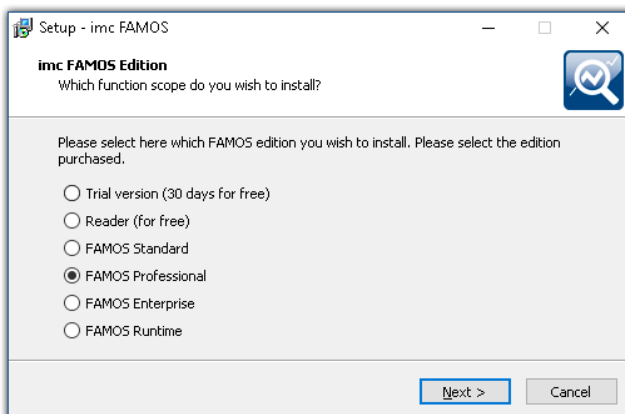

In this step, you configure the imc FAMOS installation. Select the editions you wish to install. Note that all editions except the *Reader*-edition require a license.

Follow the Assistant's instructions and select your preferred language for the help files and example files like projects, sequences and dialogs. Select any optional components which you wish to install along with imc FAMOS. Additionally, a folder for sample files is needed.

Configuration of the imc FAMOS installation



### Reference


### imc FAMOS editions

More detailed information on the imc FAMOS editions is provided in the imc FAMOS manual.

Once all products have been configured, the installation can start.



### 3.3.3 Starting the Installation

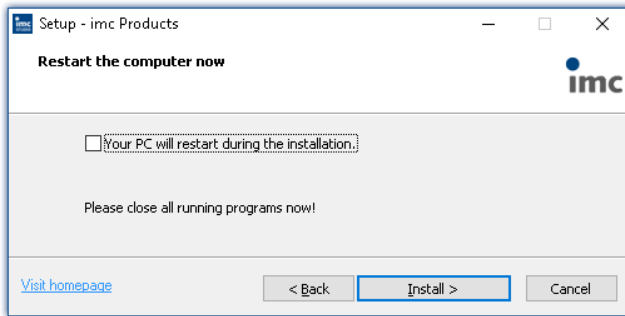


Concluding the installation setup and starting installation



#### Warning

#### Windows user account

After restarting, **be certain to log in with the same user account** with which you started the installation process. Using a different user account can cause failure of correct installation of the components.

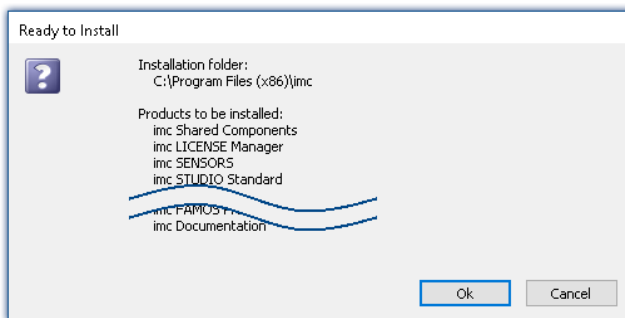

List of components to install, following restart  
(example)

Before the installation, a **system reboot** is performed. For this reason, first **close any running programs** before continuing!

Confirm the reboot by means of the checkbox and then continue (button: "Install"). Initially, the required system components are installed. Subsequently, the PC reboots automatically.

After logging in, the actual installation of the products begins. You are presented with a list of which components are to be installed, which you can confirm by clicking on "Install". The figure below shows an example; the actual dialog may appear differently depending on your respective previous selections.


Next, installation of the individual imc products begins.



#### Note

#### Disabling the system start

While installation is running, the operating system is disabled from starting again, meaning that no other programs can be started.

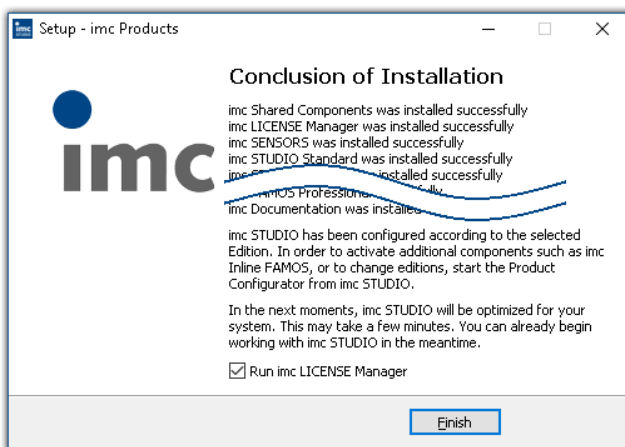


Concluding installation

When installation is finished, the following message is posted.

Next, you can start imc LICENSE Manager in order to activate your license. It is also possible to start the imc LICENSE Manager later via the Start menu.

## 3.4 Product Configuration / Licensing

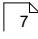imc STUDIO can be ordered and licensed/activated in various product configurations. Further details can be found in the order forms or on [www.imc-tm.com](http://www.imc-tm.com). For a list of all possible editions and components (plug-ins), see the "*Technical datasheet*" or contact our [Hotline](#) .

### Editions and components

The following editions are available for imc STUDIO, and each include a certain basic package of components (plug-ins)/functionalities.

Edition	Order code
imc STUDIO Runtime	imc STUDIO-RUN
imc STUDIO Standard	imc STUDIO-STD
imc STUDIO Professional	imc STUDIO-PRO
imc STUDIO Developer	imc STUDIO-DEV

With an appropriate "Engine" activated, any edition can run the configurations of higher editions.

Additional optional or individually licensable components (plug-ins) can also be integrated.

Each edition is able to apply configurations created with a higher edition, but not to modify them.


For the Edition **Standard**, **Professional** or **Developer**, the corresponding license is required. These can be activated in the imc LICENSE Manager. The Edition **Runtime** is a restricted version, free of charge. You can register this edition in the imc LICENSE Manager. There, select the option "**Trial versions and freeware**".


### Licensing (imc LICENSE Manager)

The software licenses are managed with "*imc LICENSE Manager*". After concluding installation, you can start imc LICENSE Manager directly in order to configure your license (e.g. by means of the Windows Start menu: group "*imc*" > "*imc LICENSE Manager*"). If imc STUDIO is started without an appropriate license having been configured, the product configuration program opens, from where it is also possible to start imc LICENSE Manager.

Follow the instructions of the imc LICENSE Manager. imc LICENSE Manager offers a separate documentation. Start imc LICENSE Manager and click on "*Help*".

### Changing the product configuration

You can change the product configuration in order to adapt it to the license purchased. For instance, if during installation you have selected a different edition or if you have purchased a product upgrade. To do this, start imc STUDIO and click in the menu bar (top right) on the symbol . The product configuration assistant now opens. You can change the configuration to correspond to the licenses you have purchased. Follow the instructions and close the assistant.

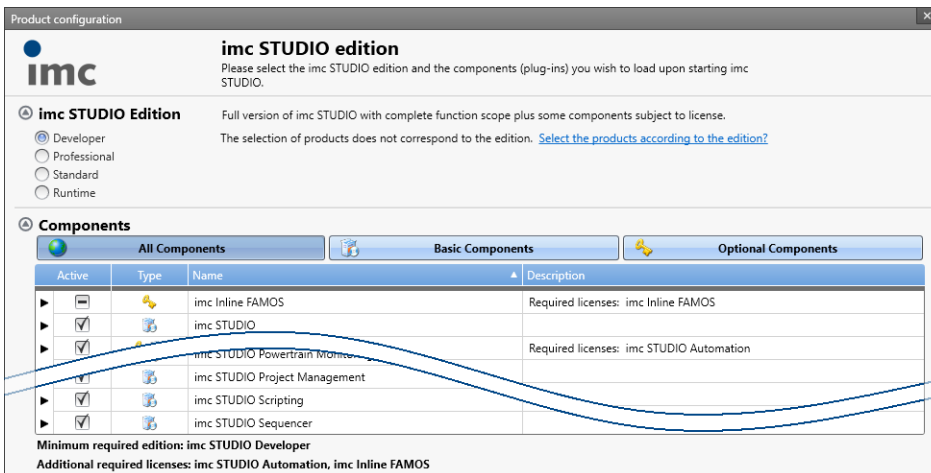

Assistant for altering the product configuration

After completing the configuration, you must close and restart imc STUDIO to apply the new settings.

## Changing the edition

In the dialog's upper region, a number of editions are available for selection. The default selection is the edition currently being used. If you change the selection, you can decide whether the available components are to adapt to the selection. In most cases this is recommended, since this is the only way all of the edition's functions will be available after an update.

Optional components are not affected by the edition selection and remain in their previous state.

Please only change the edition if you have activated an appropriate edition in the imc LICENSE Manager.

## Changing the components used

Additional components (plug-ins) for the edition selected are available to choose. Some of these plug-ins require a separate license.

In the bottom region of the dialog, the available components are shown. The set of components currently used is selected by default (except subsequently to an edition change).

Column		Description
Aktive	<input checked="" type="checkbox"/>	The component(s) is/are activated.
	<input type="checkbox"/>	The component(s) is/are deactivated
		Some of the components are activated. After clicking here, the components underneath are deactivated.
Type		The component requires an extra license in addition to the license for the edition.
		The component can be activated for the selected edition without any additional license.
Name		Product name of the component
Description		Short descriptive text about the component. More detailed descriptions of the individual components are provided in the Technical Spec Sheet.

Activate/deactivate the individual components in the column "Active". Below the list, the information on which additional licenses are required is presented.



## Note

## imc STUDIO Automation

The component "Automation" has its own independent license and for this reason always appears in the list when selected. If you possess an imc STUDIO Developer license, you also have a Automation-license.



## FAQ

### Why are there sometimes two components for the same product? E.g. "Automation Editor" and "Automation Engine"

**Answer:** Many components are subdivided into their actual function, on one hand, and on the other their respective settings interface. This distinction exist for the following reason: each edition can run any function created with a higher-level edition, but not modify it.

In other words, using the component "Automation Engine", you can run Automation-Tasks in the Standard edition. However, the Editor ("Automation Editor") is only available in the Developer edition.

### When should the "Engine" be deactivated

**Answer:** In most cases, it is not necessary to deactivate the engine if the component is not required. However, be aware that every component activated makes resource demands.

At a minimum, keeping unnecessary components active slows down the launch of the system.

**Disadvantage:** All functions belonging to the deactivated components no longer work. Example "Sequencer": Commands at Widgets, hotkeys/keyboard shortcuts, user-defined buttons, Metadata-Assistant, user-defined events.

## 3.5 Start

**Start the software** by means of the associated desktop icon or via the Start menu.



Further, as part of installation an icon is set up on your desktop and - depending on your choice during [installation](#)<sup>[17]</sup> - a symbol in the quick launch toolbar.

imc STUDIO If no icon was set up (installation option), then open the **Windows Start menu**. There you find the group "imc" and in it a link to start the product.

If [product configuration / licensing](#)<sup>[26]</sup> is missing, the Product configuration starts automatic.

### Splash screen




Next, a splash screen appears, indicating that software components are being loaded. Depending on the installation and the PC capacity, this could take some time.

**Loading the software components after start**

## Homepage - Start page

By default the Homepage is shown when the software is started. The Homepage shows certain functions, depending on the particular product, as buttons. Click on the corresponding buttons, to select your desired functions. After the first installation, the "**Homepage**" may appear as shown in the example below:

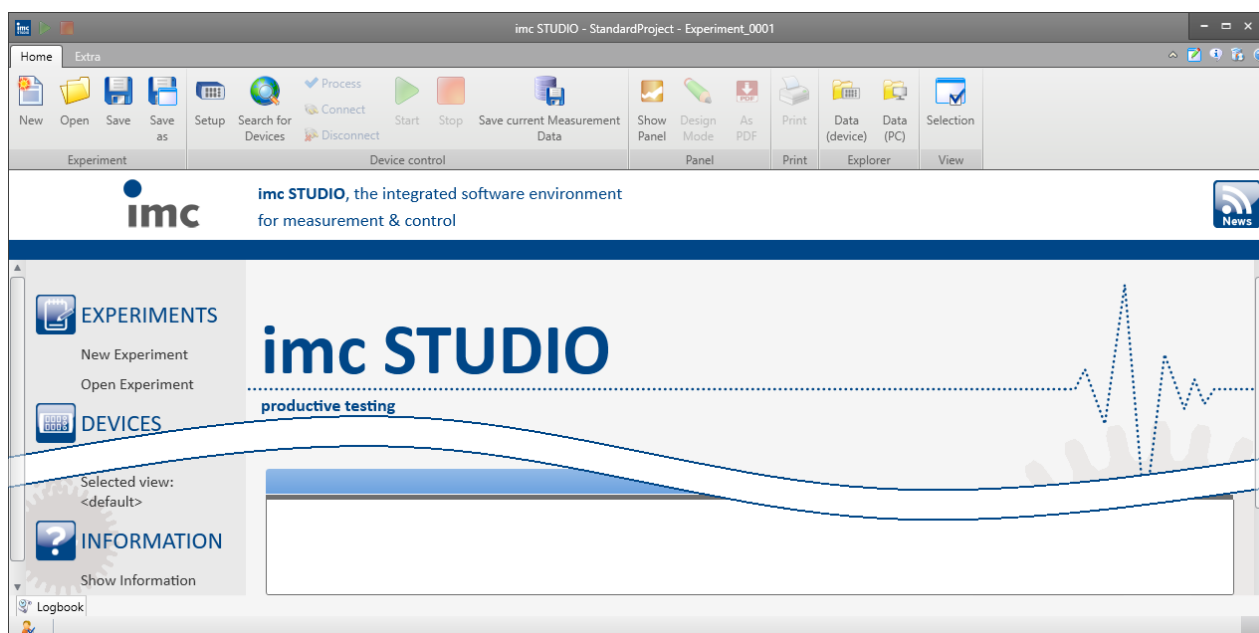

Welcome Page (Example)

## imc STUDIO starts with a simplified view

Along with installation of imc STUDIO, a number of **Views** are provided. Views in this sense are defined designs for the user interface's appearance.

imc STUDIO offers a wide variety of possibilities and functions, but the entire scope of these is not always needed for a single simple measurement.



### Note

#### imc STUDIO starts with a simplified view

In order to make it easier to get familiar with the software, the program starts with a simplified view with limited choices. All important functions for measurement and visualization of measured data are available. The menu ribbon is structured in such a way that proceeding from left to right accesses all of the [Main windows](#) <sup>31</sup>.

## Changing from the simplified view to View: Complete

You can switch to a different view at any time, in order to obtain access to all of the existing functions. To do this, go first to the menu item "**Extra**" and in the drop-down list of views, select: "**Complete**".



### Note

#### Notes on the descriptions and the screenshots

The following descriptions and screenshots always pertain to the view with the full scope of functions. Many of these functions are also found in the minimized view at another location.

### 3.5.1 Device Connection / Network / Firewall


To use an imc measurement device, imc STUDIO must set up a **connection via a network** (mostly LAN). Details on the network settings are presented in the chapter "[Setting Up - Connect the device](#)".

#### Firewall

The firewall used might **prevent** establishment of a **connection** between the operating software and the measurement device. If the software is unfamiliar to the firewall, then a corresponding prompt usually appears upon **accessing the network**. This happens, for example, after starting the software and upon first accessing the device (e.g. in a device search). Some firewall programs can also block access to system and hardware-components.

In all cases, **correct operation** is only possible if the **connection is not blocked**. The following programs are usually affected:

Program	Default path
imc STUDIO: imc.Studio.exe	C:\Program Files (x86)\imc\imc STUDIO...
imc DEVICES: imcDevices.exe	C:\Program Files (x86)\imc\imc DEVICES...
imc DEVICES Service: imcDevicesService.exe	C:\Program Files (x86)\imc\Shared

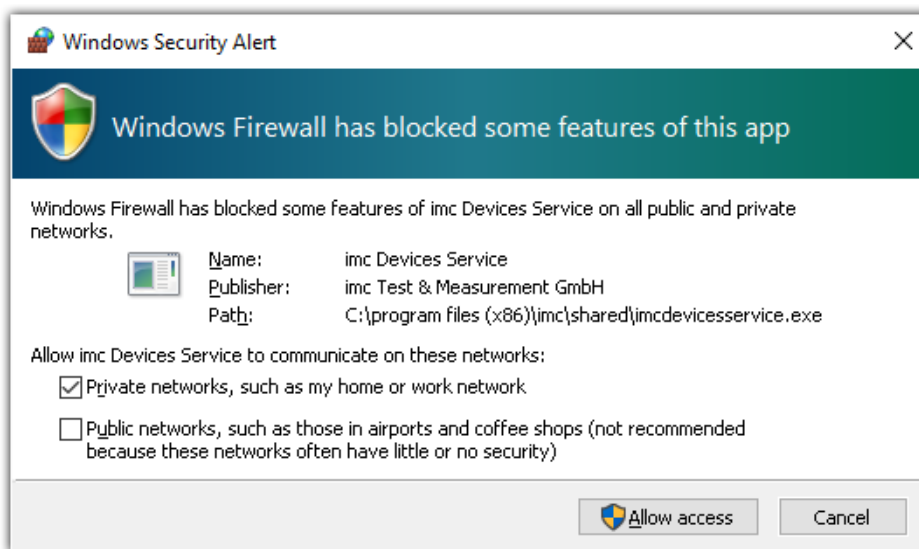

Example of the firewall warning under Windows 10

Windows firewall: Here, there is a distinction between private and public networks. For operation on LAN, it is sufficient to **enable "Private networks"**. Enable this access type. You may wish to read the operating instructions for your firewall, and/or ask your administrator / IT-department.

## 3.5.2 Main Windows / Plug-ins



imc STUDIO provides the framework for *plug-ins*. Plug-ins appear within imc STUDIO as *main windows*. A plug-in can have one or more main windows.

The main windows appear in the Navigation Pane.

On the left you see an example of the Navigation Pane with the main windows **Homepage**, **Setup**, **Panel**, **Automation** and **Sequencer** (**Panel** is selected).

To jump to one of the main windows, click on the corresponding button in the Navigation Pane.

[Navigation Pane](#)<sup>[56]</sup>: Select this link to go to further information on operation of the Navigation Pane.



### Note

### Notes on the use of the simplified view

- When you use the [simplified view](#)<sup>[29]</sup>, the Navigation Pane is hidden. In this case, in order to go to the main windows Setup and Panel, use the menu ribbon.
- The other main windows can only be reached via the Navigation Pane.
- If you need it, you can [show the Navigation Pane](#)<sup>[58]</sup>, or change the [view](#)<sup>[60]</sup>.

## Tool window

Most plug-ins have their own tool window (e.g. the Panel with the tool windows: Widgets and Data Browser). The tool windows are described in their respective sections.



### Reference

### See also

[Tool window](#)<sup>[57]</sup>: Select this link to go to further information on operating the tool windows and for a description of the tool windows belonging to the imc STUDIO frame.

## 3.5.3 Important Settings

### User and User groups

imc STUDIO has the ability to administer various **users** which are permitted to use the program in various ways. For details see the section "User administration".

### Options

Before beginning to work with imc STUDIO, you can change essential settings, such as the **folder path where the experiments are saved**.

You can change the folder path in the options (under "Project Management" > "HDD settings"):

Ribbon	View
Extra > Options (🔑)	all




Note

Reading and writing access rights are required

Please note that this setting will apply for every user of imc STUDIO. Each user must possess reading and writing access rights for the specified folder path.

## 3.6 Info / Version Information

imc STUDIO consist of multiple components (plug-ins). In order to see which components are included in your package, click in the menu bar on the symbol . Then a pop-up window appears displaying the product names and details on the components:

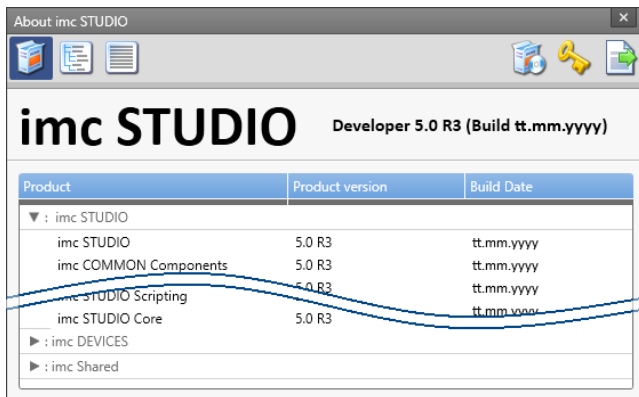

Version information (example)

With the buttons on the left side, you can change the list's depth of detail and how it is sorted.

With the buttons on the right side, you can start the assistant for the [product configuration](#)<sup>[26]</sup>, start the [imc LICENSE Manager](#)<sup>[26]</sup> or export the product selection.

While performing the export, you can save the contents as a file in XML format. For inquiries for Hotline, it may be necessary to send it as an Email (see also chapter "[Customer Support / Hotline](#)"<sup>[7]</sup>).



## 3.7 Information and Tips

### 3.7.1 Changing Languages and Installing Additional Languages

If in the installation type "[User-defined](#)" the option "**Install all languages**" was not selected, then upon conclusion of the installation, imc STUDIO is available in **English** plus, if provided, in **the operating system's language**. In all other cases all supported languages are already installed.



#### Note

#### Observe operation system settings

Please ensure that your operating system is set correctly to the display language. Some languages require modifications to be made accordingly. In particular, the "System locale" must be set correctly to correspond with the display language.

Otherwise, with some languages there can be problems with the characters. Languages affected include Japanese, Chinese, Russian, ...

### Changing the language

By default, the imc software will start in the same language as the Windows version installed. If this language is not supported, then the English program version appears.

The language can be changed, irrespective of the Windows version. Use the program "**imc Language Selector**". The program is found in the Start menu under the group "imc".



#### Note

#### Constraints

Only the imc software's texts are converted. Components which depend on the operating system's language setting are not affected.

Please only use one of the following two languages:

- Default: the operating system's language
- English

Any other selection may cause malfunctioning if the operating system and the imc programs use different languages.

### Installing additional languages

If desired, all other supported languages can be installed later (no data processing medium is required).



#### Note

#### Which languages are be installed subsequently

In subsequent installation of languages, **all languages supported** are installed. There is **no selection** possibilities.

**Step by step**

- Administrator rights are required.
- Open the **installation folder** of imc STUDIO (e.g. "C:\Program Files (x86)\imc\imc STUDIO..."), e.g. with Windows Explorer or by means of the command line.
- There, open the folder "**Languages**"
- Run the file "**InstallLanguages.bat**".
- Wait until the script stops and posts the message "**Failures: 0**". This indicates that the installation has completed successfully.

**Note****Instruction notes**

If installation was unsuccessful, the necessary user rights may be missing:

- If "**InstallLanguages.bat**" is called via the **command line**, run the **command line as Administrator** (context menu: "Run as Administrator")
- If "**InstallLanguages.bat**" is called via the **Windows Explorer**, run the **call as Administrator** (context menu: "Run as Administrator")

## 3.7.2 Recommended Virus Scanner Settings

The presence of many channels can **burden the PC** if a virus protection program scans the data captured. This may cause a **jiggling display** and high demands on the processor.

We strongly recommend **removing imc STUDIO from the virus scan**. Most virus protection programs are able to classify individual programs as low-risk. To do this, please refer to the instructions for your virus scanner.

Low-risk	Default path
Add the program <b>imc.Studio.exe</b> to the list of low-risk programs	C:\Program Files (x86)\imc\imc STUDIO...
Add the program <b>imcDevices.exe</b> to the list of low-risk programs	C:\Program Files (x86)\imc\imc DEVICES...
Add the <b>database</b> path along with all subfolders to the list of low-risk folders	C:\Users\Public\Documents\DB

Ensure that its data are not searched for viruses during reading or writing

## 4 Setting Up - Connect the device

There are multiple ways to **connect the imc measurement devices with the PC**. In most cases, the **connection via LAN** (local area network, Ethernet) is implemented. See section "[Connecting to LAN in four steps](#)" for the **quickest way to connect** PC and measurement device.

But there are also other connection types:

- Modem (TCP/IP with PPP)
- WLAN
- Radio modem (GSM, mobile phone network)
- Null modem (serial interface)

These are described in a separate chapter: Special options for connecting to the device.

The devices use the **TCP/IP protocol** exclusively. With this protocol, some settings and adaptations for your local network may be necessary. For this purpose, the support of your network administrator may be necessary.

### Note

When **using multiple TCP/IP connections**, e.g. LAN, WLAN and modem, observe the remarks in the chapter "*Computers with multiple TCP/IP connections*".

### 4.1 Connection via LAN

#### To connect via LAN there are two options:

1. The measurement device is connected to an **existing network**, e.g. via network switch or hub.
2. The measurement device is connected directly to a network adapter on the PC (**point-to-point**).

In a LAN, the first case is typically implemented. For both variants, **different cables** may be required! Modern PCs and network switches are usually equipped with Auto-MDI(X) automatic crossover recognition, so that having multiple various cables is no longer necessary.

#### 1. Connecting to an existing network:

- An uncrossed UTP cable, e.g. CB-UTP-3 is necessary
- Connect the measurement device's LAN jack to a switch. Only with a hub or switch is it possible to run multiple devices.

#### 2. Direct connection to the PC (point-to-point):

- If you are using older PCs with AUTO-MDI(X) Crossover Detection, you need a special "crossed" UTP-cable (Category 5, RJ45 connector, e.g. CB-UTPX-3)
- Connect the measurement device's LAN connector directly with the PC's LAN jack

## Recommended network configuration:

If possible, always use up-to-date network equipment in order to achieve the maximum transfer bandwidth. The current standard (2014) is: 100BASE-T (Fast Ethernet 100 MBit/s) or 1000BASE-T (Gbit Ethernet). Gbit Ethernet network equipment (switch) is backwards compatible, so that imc devices can be operated with 100MBit Fast Ethernet.

The cable length between the switch and a PC or a device should be less 100 m. Use a shielded cable. If the length of 100m is exceeded, then you have to insert another switch. If the system is being integrated into an existing network, you must ensure that the minimum data rate can be guaranteed. If this is not the case, you should use network bridging.

## 4.2 Connecting via LAN in four steps

The most common case is described below: the PC and the device are connected via cable or switch. The device's IP-address must be set in the PC's address range. Subsequently, the device can be connected with the PC. If a connection has ever been established previously, the software knows the device's hardware configuration. In that case, experiment configurations can be prepared without any connection to the device.

### Step 1: Determining the PC's IP-address

Before starting the configuration of your measurement device, you should **determine your computer's IP-address** (the following screenshots and texts refer to MS Windows 10). There are multiple ways to do this, of which some may not be possible on your PC, depending on the administrator rights you have. In such cases, you should contact your responsible administrator/IT-service.

The device's and the PC's IP-addresses and subnet masks must be compatible with each other.


Before determining the IP-address, connect the measurement device with the PC and activate it.

To open the configuration dialog, use one of the following:

- Open the Windows Control Panel and search for "**View network connections**"
- Select "View network connections"
- Open Windows' input box by using the keyboard combination of Windows-key + R [Win-R].
- Enter the following command in the edit box:  
`control netconnections`

The "**Network Connections**" window appears. Then right-click the mouse over the entry for your network connection and then select the item "**Properties**" in the context menu once again. Then the Connection Properties window appears.

Select Version 4 of the **Internet Protocol Version 4 (TCP/IP4)** and click on **Properties**. Now the current settings are visible. Please note the computer's **IP address** (3) and the **subnet mask** (4).

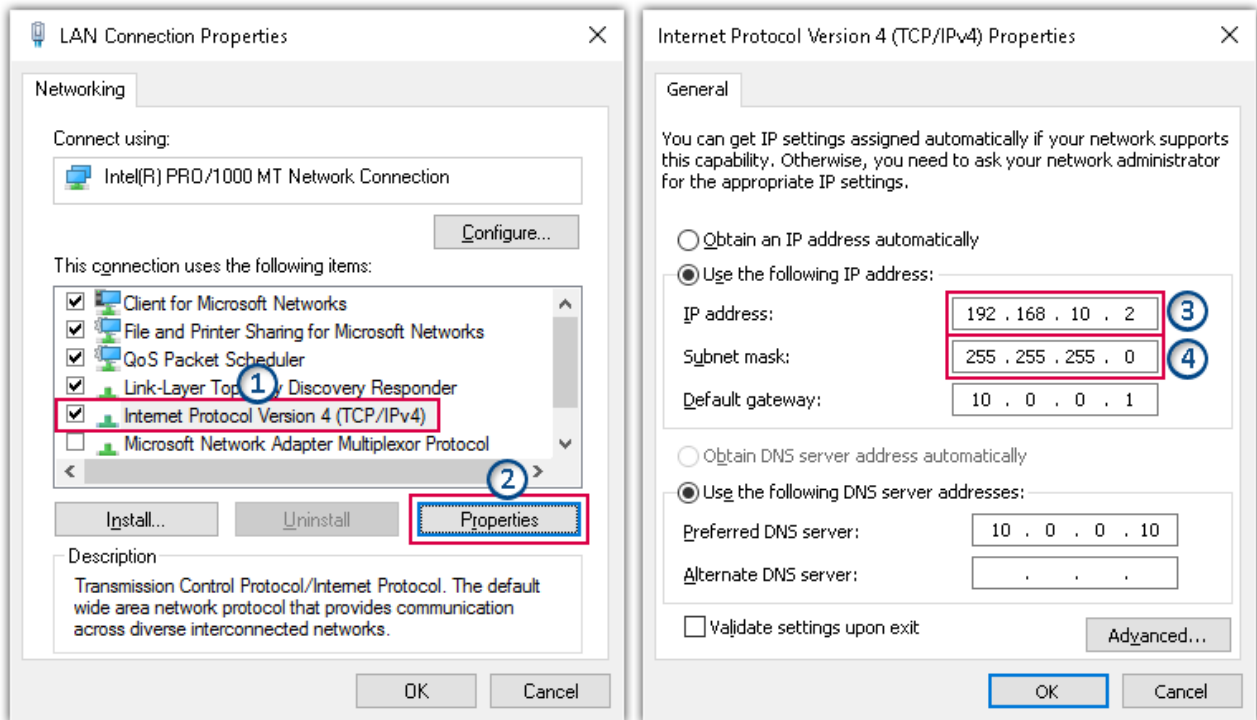

Select Internet Protocol (TCP/IP)

Settings for TCP/IP

### Warning

Be careful in changing settings, since if the same network card is used, there may be difficulties later in the company network. Please discuss this with your responsible administrator/IT-service.

### Note

#### Obtain IP-address automatically (DHCP)


If "Obtain IP address automatically" (DHCP) is selected, no IP address is displayed. In this case, you have to determine the current IP-address using the Command Prompt/Command line.

Note, however, that automatically obtained IP-addresses might change the next time the operating system is started!

### Determine the IP address using the Command line

Open Windows' input box by using the keyboard combination of Windows-key + R [Win+R]. Type `cmd` in the text box and confirm by pressing Return. In the command line window which then appears, type in `ipconfig`.

Now you can read the IP-address of the desired network connection:

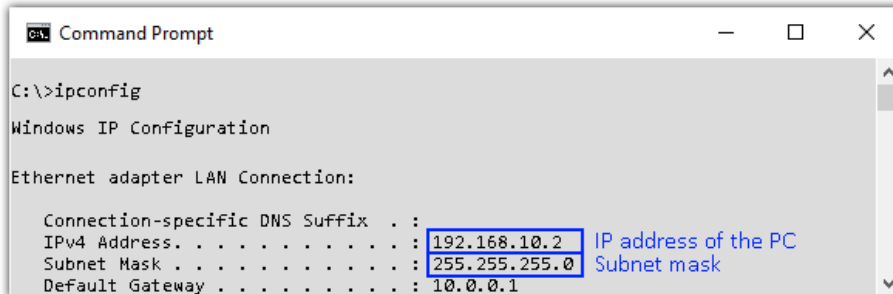

```

C:\>ipconfig

Windows IP Configuration

Ethernet adapter LAN Connection:

    Connection-specific DNS Suffix  . : 
    IPv4 Address. . . . . : 192.168.10.2    IP address of the PC
    Subnet Mask . . . . . : 255.255.255.0    Subnet mask
    Default Gateway . . . . . : 10.0.0.1
  
```

Result of the command "ipconfig"


In the example shown, the fixed IP 192.168.10.2 with subnet mask 255.255.255.0 is selected. For measurement devices, any numbers would be suitable which begin with 192.168.10. and then do not contain 0, 2, or 255. The 0 and the 255 should not be used, if possible, due to their special significance. The 2 is the computer's number.


## Step 2: Connecting the measurement device

When you **connect** the measurement device **directly to your PC**, you may need to use a **"crossed" network cable** in some circumstances. If the measurement device is connected to the network **via a network hub** or switch, or a patch box, use an **uncrossed network cable**. Modern PCs and network switches are able to switch electronically. Hence you can use both cable types.

Use an appropriate network cable.

## Step 3: IP-configuration


Start imc STUDIO. Open the dialog for configuring the device IP address by clicking on the button "Device interfaces" (.

Ribbon	View
Setup-Configuration > Device interfaces (  )	Complete

If this **button** is **not present** in the view you are in, it is also possible to open the dialog after a device search if it failed to find any new devices. Subsequently, a prompt appears asking whether to search for devices with an inappropriately configured network interface. Close this message box by clicking "Yes".

Once the dialog starts, the system automatically searches for all devices in the network. In the tree diagram, all available devices are indicated. If the device is found in the group **"Currently not reachable"**, you need to configure the LAN settings. If the device is found in the group **"Ready for measurement"**, you can retain the current settings or view them. Select the device.

If there is any IP-conflict, devices affected will not be listed.

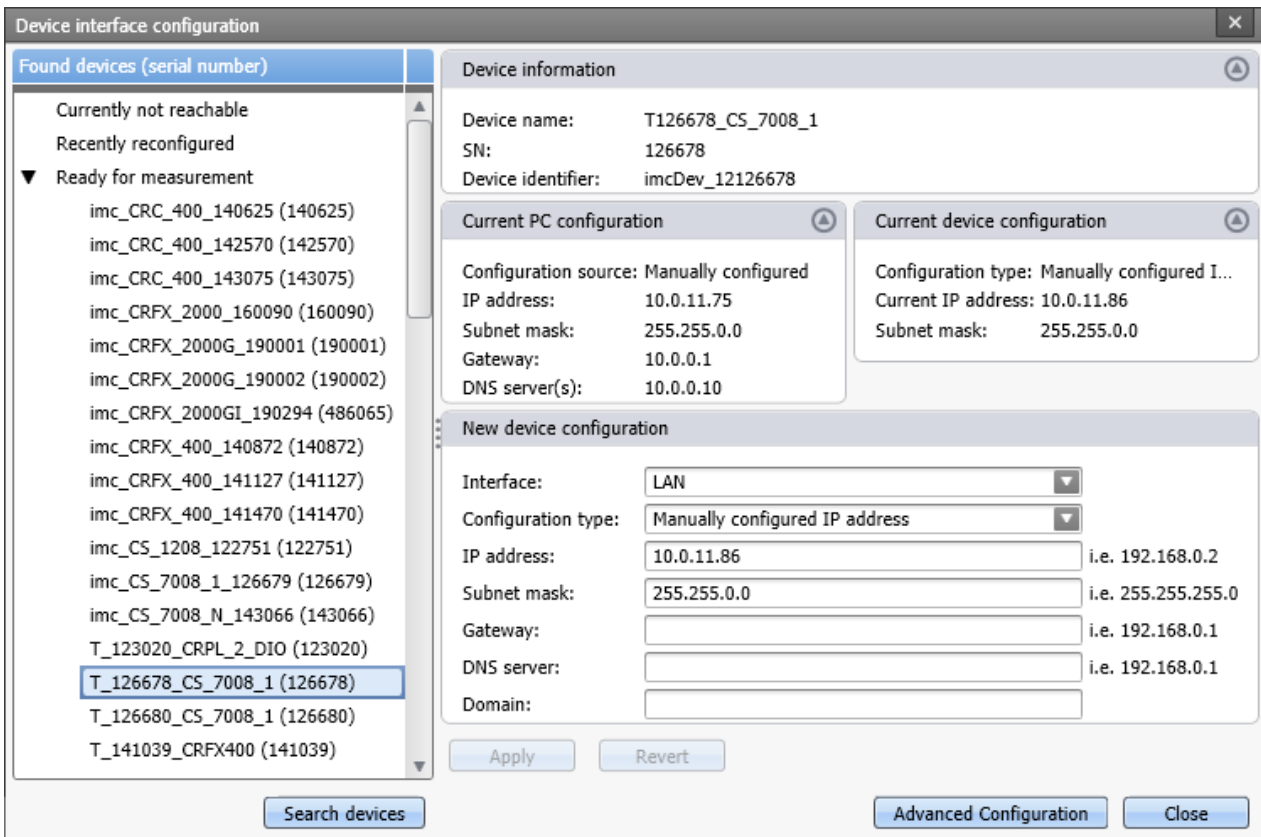

Picture 1: Display of measurement devices found and of the IP-address

If the configuration type: *DHCP* is used, **the IP-address is obtained automatically** from the DHCP-server. If there is a direct connection between the device and the PC with a crossed cable, you should deactivate the DHCP. If it is **impossible to obtain any setting values** via DHCP, the **alternative values are used**. These could lead to errors in the connection (different networks, same IP-addresses, etc.).

Without DHCP, you must **set the IP-address manually**. Please note that the device's and PC's IP-address must fit together, in other words that in the network mask only the portion representing the device is different (see example).

Example for IP settings	PC	Device
IP-address	10. 0. 0. 34	10. 0. 0. 45
Network mask	255.255.255. 0	255.255.255. 0

In order to apply the changes, click on the button **Apply**. Wait for the device to restart and then close dialog.



#### Note

#### Connection via modem or WLAN

If the connection to the device is established via a modem or WLAN, start the program "*imc DEVICES Interface Configuration*" by clicking on the button: "*Advanced Configuration*" (see picture 1). An exact description is found in the software manual chapter: "*Setting Up - Connect the device*" > "*Special options for connecting to the device*".

## Step 4: Integrating a device into an experiment

Now you are ready to add the device to the imc STUDIO experiment. If your device is unknown to the system, first perform the "device search".

Ribbon	View
Home > Search for devices (🌐)	all
Setup-Control > Search for devices (🌐)	Complete

Select the desired device: Once you click in the checkbox "Selected" for the desired device, it is ready to use in the experiment (see *Device Search - Known and Selected*).

Selected	Device name	SN	Device specification
<input checked="" type="checkbox"/>	T_124835_C1_1_LEMO_ET	124835	imc C1-1 LEMO
<input type="checkbox"/>	T_130039_busDAQ_X	130039	busDAQ-X
<input type="checkbox"/>	T_130311_SPARTAN_U32_CAN	130311	imc SPARTAN

You can also select multiple devices for your experiment.

Now the device is "known". After the next program start it is available for selection. For further information, see the documentation on plug-in Setup.

## 4.3 The Network

### Optimize the network


You should observe the following notes for networks with high data rate, to reduce the risk of a data overflow.

1. The network between switches/hubs and PC should be 1Gbit/s
2. The actual data rate is decreasing with the number of channels. Avoid unnecessary channels.
3. The RAM buffer should be as big as possible, not *Auto*. See also RAM buffer time.
4. Save only channels you need to the internal disk.
5. Avoid curve window setting that need a lot of performance. Choose scroll mode. Avoid the rezoom function after a long measurement duration. Don't set the sample points to symbols. Try to find a curve window configuration, that shows no bucking.
6. Observe the [recommended virus scanner settings](#) <sup>34</sup>! It would check every sample written to the hard drive. That takes most of the performance of a PC and the hard drive.
7. Check the processor and network load with the PC task manager



## Example of a Complex Network

Theoretically, every type of network can possibly function. Until now, we have only considered networks consisting of a PC and  $n$  imc Devices units. However, it is possible for example, to have 3 PC's, two printers and  $n$  imc-Devices units connected in a network:

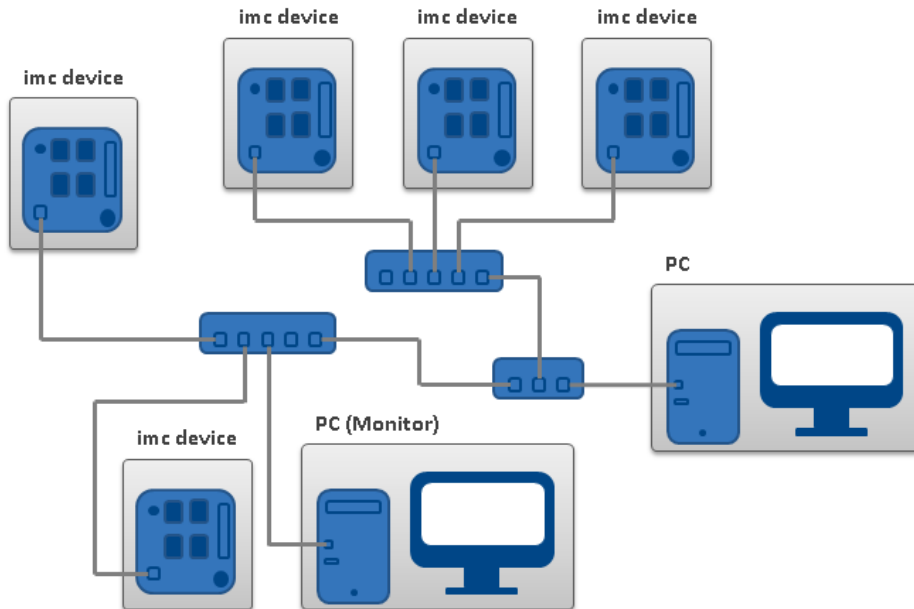

### Monitoring

The PC on which imc STUDIO is installed is declared as the Master-PC, which configures the measuring device. Various other clients can access the measuring device via the network (e.g. via imc STUDIO Monitor or imc LINK, or, it is set up accordingly, using a browser via imc REMOTE WebServer).

The well-known network restrictions are also valid here. In particular, it is impossible for more than one person to write to the same file. Furthermore, it is impossible for one person to open a file while another writes to it. In general, all network restrictions that apply to files also apply to the individual Devices units.

In consequence, the software can prevent multiple users from configuring the same device.


### Using a second network

To avoid disturbing data transfer between devices units and PC's, a second network using a second network card per PC can be set up. This second network can be used for transferring data between the PC's.

## 4.4 Firmware Version

The device software (imc STUDIO) always ships with a matching firmware version. The software only works with devices having the right firmware. Upon the connection/preparation, the versions are compared. If they don't match, the [firmware update](#)<sup>43)</sup> is carried out.

If multiple firmware versions are installed on the PC, then a defined version must be selected for each device. The selection strategy is set in the Options: "Setup" > "Device options" > "Selection of the imc DEVICES version".

Ribbon	View
Extra > Options 	all

Option	Description
Selection of the imc DEVICES version	<p>If multiple imc DEVICES versions are installed on the PC, a specific version must be selected for the operation of each device. This option controls the selection strategy.</p> <p>If only one imc DEVICES version is installed, this setting has no effect.</p> <ul style="list-style-type: none"> <li>• <b>Manual:</b> With "<b>Manual</b>", the system always asks which firmware version to use when device are selected or an experiment is loaded.</li> <li>• <b>Automatic:</b> "<b>Automatic</b>" avoids firmware updates. The version currently running on the device is used preferentially.</li> <li>• <b>Always use latest:</b> With this selection, the most current firmware version compatible with this imc STUDIO version is always used.</li> </ul>



### Note

### Use of older firmware

Please note that a new firmware version not only contains new functions, but also reflects resolved issues. These changes only take effect if the device is also using the new firmware.



### Question: Which firmware versions support my imc STUDIO version?

**Answer:** There is a clear assignment regarding the compatibility with the firmware/firmware group:

imc STUDIO version	assigned firmware group
3.0	2.7
4.0	2.8R3
5.0R1	2.8R5
5.0R3	2.8R7
5.0R5+	2.9
5.2	2.10, 2.11, 2.13
...	...

**For version 4.0 to 5.0**, the applicable rule is: the assigned group and all older **groups up to 2.8R3** are compatible with the imc STUDIO-version used.

Example: the following firmware groups are compatible with imc STUDIO 5.0R1: 2.8R3 and 2.8R5.

**As of version 5.2**, the applicable rule is: the assigned group and all older **groups up to 2.10** are compatible with the imc STUDIO-version used.

### Question: Can devices in the same experiment use different firmware versions?

**Answer:** Yes. If multiple devices are used, each one may use a different firmware version.  
Prerequisite: The imc STUDIO-version used supports the firmware versions.

### Question: Can I install a new firmware version without changing the imc STUDIO version?

**Answer:** Yes. Prerequisite: The imc STUDIO version used supports the firmware version.

### Question: Is there a way to determine what firmware the device is using?

**Answer:** Yes.

- On the Setup page: "Devices", a column can be added: Device firmware
- In the Device properties.

## 4.4.1 Firmware Update

Every software version comes with matching firmware for the hardware. The software only works with devices having the right firmware.

Once the program connects up with the unit, the device's firmware is checked. If the software version doesn't match the device's firmware version, you are asked if you want to perform a firmware-update.

Depending on the device type, the following components are loaded automatically: Interface-firmware (Ethernet, modem, ...), booting program, amplifier firmware, firmware for the signal processors.




The firmware update is only required if the software was obtained as an update. If you obtained your measurement with the software, no firmware update is necessary.

 **Warning**

**Do not under any circumstances deactivate the device during the firmware update.**

If any error messages appear during the firmware update, do not switch the device off, but contact the imc Hotline. The firmware update may be continued with guidance from the Hotline.



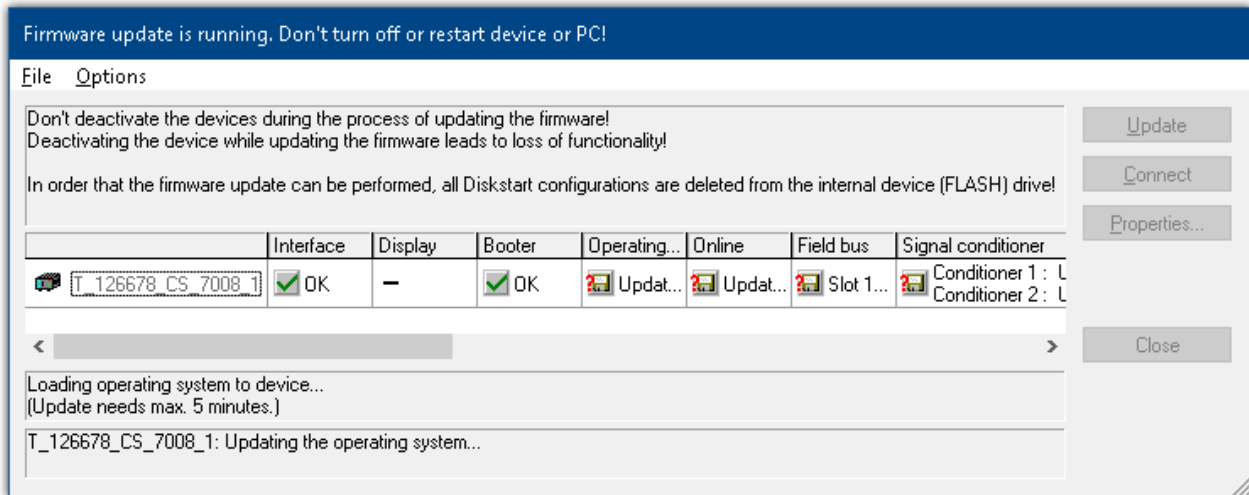

The dialog for the firmware-update looks like this:



**Start of the firmware update (example of a single device)  
The state of the components of the firmware is displayed in the list.**

Component	Description
Interface	Interface-Firmware (Ethernet)
Booter	Start-up program for the device upon switching-on
Operating system	Device operating system
Online	Online-functions and hard drive controller
Display	Operating system of the connected displays
Field bus	Field bus
Signal conditioners	Amplifiers


The following symbols for the individual firmware components appear in the list:

Symbols	
	not current
	firmware conforms to current standards
	error occurred during update procedure
	this option is not available on the device

If no status indicators are displayed, no connection could be made to the corresponding device.

The duration of the update depends on the amount of amplifiers (can last up to several minutes). You will be informed on the progress.

You are notified when the firmware setup concludes successfully, as shown below:

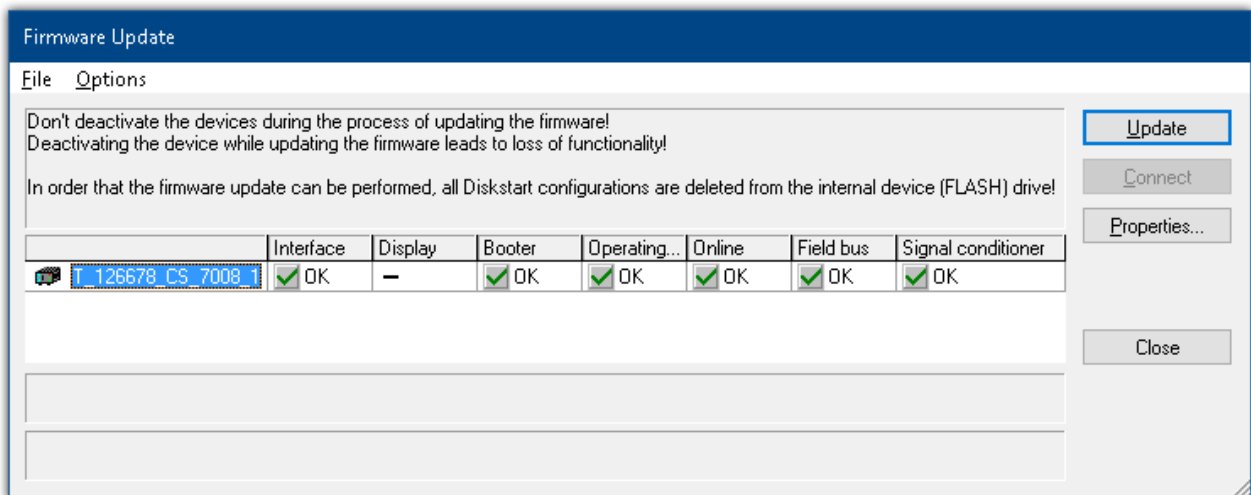

Conclusion of the firmware update (example of a single device)

- Choose "Close". The device can now be used with the product software.



### Warning

**Do not interrupt the firmware update!**

#### Be absolutely certain to observe the following:

1. Under no circumstances should the device or its power supply be deactivated during the firmware update!
  2. The network connection may not be interrupted. Use a cable connection, not WLAN!
- For a variety of reasons, the firmware update sometimes does not conclude properly, for example due to interruption of the power supply. For instance, the "handshake signal" at the end of the procedure may be missing. In this case, no measurement channels would be displayed initially. However, restarting the device and its software and performing the firmware update again usually restores everything to normal.  
It may be necessary to call the menu function "Update all components" in the FW-Update dialog's Options menu. This scenario only results in permanent damage in the most rare cases, and it is very worthwhile to repeat the procedure before sending a device in for repair.
  - Behaviour under error condition, Windows cuts off the network connection without the user's knowledge; but this can be prevented using the PC's Control Panel.  
Background: During the firmware updates there is no data transfer for a few minutes and thus no network activity; Windows detects inactivity of the connection and the following mechanisms are set in motion:
    - a. Windows' energy saving mode switches the LAN adapter off, consequently interrupting the network connection!
    - b. Windows switches to the next LAN adapter if there is one (some PCs have multiple adapters in order to, for instance, access SAP or Novell in parallel, which are often running on separate networks.)
    - c. Other scenarios are feasible, e.g. if switches are activated, which can also respond to missing data traffic.

If an error message is posted during the firmware update, leave the device on and contact the imc Hotline. It may be possible to continue the firmware-update under the guidance of the Hotline using a service program.

 Note

---

**Firmware logbook**

The "*File*" menu offers a function for working with the firmware log file. Every action taken during a firmware update plus any errors which may occur are recorded in a log file. This log file can be displayed with menu "*File*" > "*Show log file*".

---

## 5 Experiments, Projects and the Database

This chapter describes the interdependencies among the "Datenbase", "projects", "experiment templates" and "experiments".

### Experiment


The experiment includes a record of all settings needed for generating the measurement data as well as viewing and evaluating them. The actual measured data are saved with the "experiment" to which they belong.

You can create a variety of experiments to accomplish a corresponding variety of measurement tasks. imc STUDIO always works with exactly one experiment and all changes are saved to it.

Among others, the following settings are saved:

- the experiment file (filename extension: "\*.imcStudio"),
- measurement files and metadata,
- various backup files and administration files

Among other things, the experiment file contains all the settings configured in the main windows and in the Setup-Assistants.

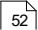Each experiment has a unique name which is set when it is [saved](#) .

### Measurement data

By default, the measured data are saved in the Experiment folder. They belong to the experiment. You specify the data structure in the Device-settings under "Storage" (Setup page: "Devices" > "Storage").

### Project


A project is primarily a collection of various experiments. The factory settings of imc STUDIO are configured in such a way that only one project is present and that you are aware of it to the minimum extent possible.

All of your experiments are saved in this project ("StandardProject").

Some options and configurations are not saved along with the experiment. For instance, they might be saved along with the project and apply to all experiments belonging to the project. In some cases, you can define what has to be saved where. E.g. when generating variables, you can change the validity scope and, for instance, save it not just for that experiment but for all experiments in the project.

Whatever is saved at the Project level (and thus not with the specific experiment) is correspondingly denoted at the locations affected.

A project can include:

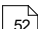
- one or more experiments
- one or more [experiment templates](#) 
- project settings (e.g. views, user administration and project-events)

After the first start of imc STUDIO, a standard project is set up in which your experiments are saved.

## Project view - working with multiple projects

When you activate "Project view", there is a [project-based tree diagram in the Open- and Save-dialogs](#)<sup>51</sup>. Here, you can create additional projects and load experiments from other projects.

You can activate the "Project view" in the options (under "Project Management" > "General options"):

Ribbon	View
Extra > Options (  )	All


  

Option	Description
Project view activated	<p>To create more projects, you must activate the <b>Project view</b>. This option is deactivated by default. (Information on <a href="#">Projects</a><sup>47</sup>).</p> <p>There is an extended view available of some <a href="#">dialogs</a><sup>50</sup>. Multiple projects can be created and used.</p> <hr/> <ul style="list-style-type: none"> <li>• Only activate the <b>Project view</b> if you wish to use and manage multiple experiments in separate projects.</li> <li>• If this function is deactivated, some dialogs are displayed in <b>simplified form</b> (e.g. "Save experiment" and "Open experiment" are <b>missing Project selection</b>, for instance).</li> </ul>


## Datenbank

The database is the data repository for imc STUDIO. Here, the projects and their associated experiments are saved. The database does not have its own settings and configurations.

The folder path for the **database can be freely selected** (in the Options under: "Project Management" > "HDD Settings").

Ribbon	View
Extra > Options (  )	All

Option	Description
Database folder	<p>Here you set where the "<b>Database</b>" is to be saved. (Information on Data management)</p> <hr/> <p> The database is not user-dependent. Note that every user who is set up in the system has writing and reading rights for this path.</p>

## Database conversion

If the database structure has been changed, you are subsequently notified. One way this can happen is as a result of updating to a new version.

A **conversion-dialog** appears. You can convert the database or have it copied beforehand. After the conversion, the entire **database can no longer be used with the older version**.

Databases are not downward compatible.

In the upper region, the reason why the database does not fit with the current version is noted. E.g., the database may be too new or too old. In the list below, all databases found in the folder selected are listed. The "Status"-bar contains information on the database.



The following approaches are available:

Approach	Description
Select an existing database	<p>Select the appropriate database and click on the button "Apply".</p> <p>If it is necessary to <b>convert the database</b>, an additional dialog appears. Here, the user is prompted to decide whether to <b>use the database under a new name</b>. If you choose:</p> <ul style="list-style-type: none"> <li>• <b>no</b>: the existing database is converted. It can no longer be used with the older version.</li> <li>• <b>yes (recommended)</b>: the database is copied. Enter a name for the new database. Now you have two databases. You will have a backup copy and can continue to use the old database with the old version.</li> </ul>
Create a new database	<p>Click on "Create new". Enter an appropriate name for the database. It will be created in the folder selected (parallel to any already existing databases).</p>
Change the database's folder	<p>Click on the button "..." next to where the folder is indicated. Select an appropriate folder.</p> <p>Here, select a folder where the database folder is to be created later. Not the database itself. E.g. the default folder: "C:\Users\Public\Documents". The database will be created in this folder, e.g. "DB".</p>

## Experiment Template

See: [Experiment Templates](#) <sup>52</sup>

### Note

#### Creating one's own files on an experiment - in the folder "Meta"

You can **create your own files on the experiment**, such as metadata, imc FAMOS-sequences, info-files, ...

To do this, use the **folder: "Meta"**. First create this folder manually in the experiment path. If you save or export the experiment under a different name, all files from the folder "Meta" come along with it.


## 5.1 Dialogs: Project and Experiment

The Project Management dialogs are described below:

- with "Project view" and
- with "Experiment templates".

By default, these options are deactivated, in consequence of which not all functions are available. Options-dependent functions are mentioned explicitly below.

The dialogs following the functions "Manage Project", "New Experiment", "Save As" and "Open" are structured similarly. The dialog is described below on the basis of "Project Management" as an example. Not all dialogs feature the complete scope of functionality.

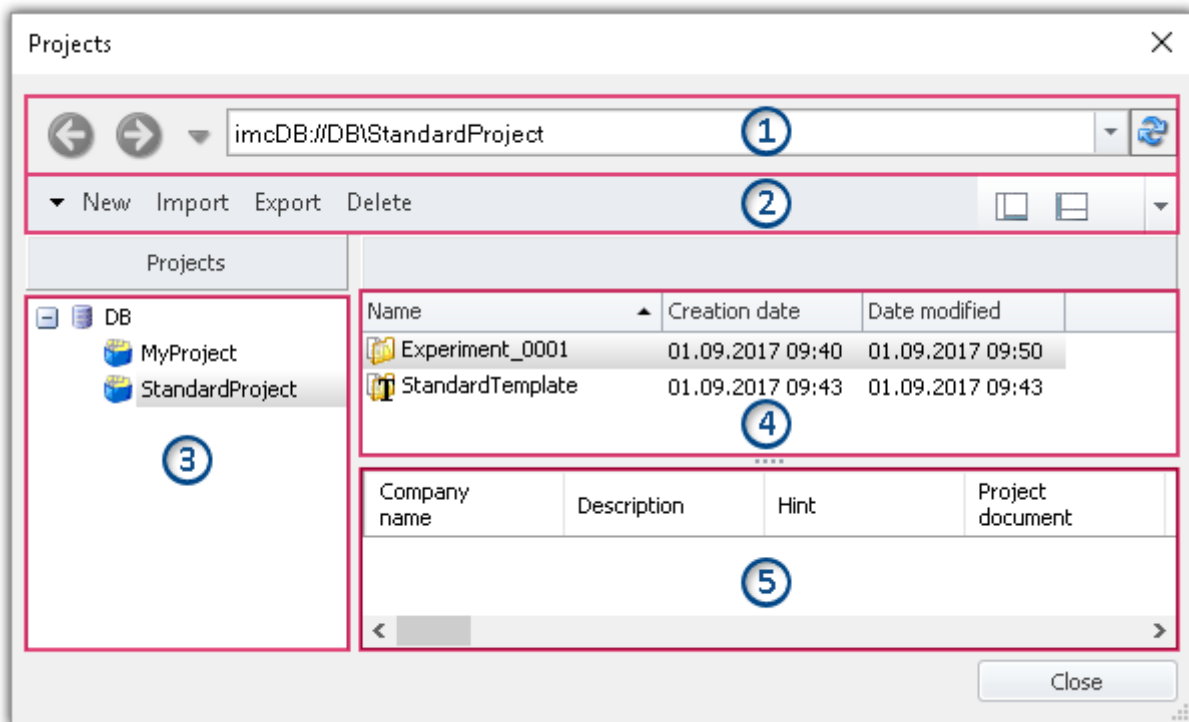

Example: Manage project

The dialog is subdivided into five regions (from top to bottom):




1. Address bar
2. Menu bar
3. List of all projects
4. List of all experiments and experiment templates in the selected project
5. Linked metadata information belonging to the selected experiment

By default, the regions 1,2 and 4 are displayed; the others can be activated if desired.

### Region 1: Address bar


The address bar displays only the names of the database and the project selected. The bar has no additional functions.

## Region 2: Menu bar

Function	Description
New	<p><b>Create new project:</b> Creates a new project in the selected database (a database must be selected).</p> <p><b>Create new experiment template:</b> Creates a new <a href="#">experiment template</a> (a project must be selected).</p>
Import	<p>Imports elements (projects, experiments and or experiment templates) from a file in the selected entry.</p> <p>The file can contain multiple elements. You can select either all or individual elements for import. Additionally, the target name can be changed.</p> <p>Be sure to first select the target correctly. You can only import a project if the database is selected. You can only import experiments and experiment templates if a project is selected.</p> <p>You can only import projects if the Project view is activated.</p>
Export	<p>Exports the selected entries to a file.</p> <p>Whole projects and individual/multiple experiments and experiment templates can be exported to a file.</p> <p> Manually created folders are not included with the export. The exception is a folder in the experiment path named: "<a href="#">Meta</a>".</p>
Delete	<p>Deletes the selected entries.</p> <p>Complete projects and individual experiments/experiment templates can be deleted. If you select delete an experiment with saved measurement data, a prompt appears for confirmation that you wish to delete the data.</p>
	Show/Hide Region 3 (list of all projects)
	Show/Hide Region 5 (metadata information)

## Regions 3 and 4: List of all projects/experiments and experiment templates

In these two regions, the projects/the experiment and experiment templates are listed. When you select a project, all elements of the project selected are displayed in the region at right.

Region 3 is only displayed if the project view is activated and the region is shown (via the menu button: ).

Region 4 only shows the experiment templates if these are activated.

## Region 5: Linked metadata information

The metadata saved with the selected experiment are displayed in this region. When an experiment is saved, the metadata can be saved automatically along with it. In the Options "[Metadata](#)" > "[Experiment - Metadata](#)" > "[Setup page](#)", you can select which source to use for the metadata.

Only shown if the region is shown (via the menu button: .

**Dialog: New experiment**

See: [Creating an experiment](#) <sup>52</sup>

**Dialog: Manage Project**

See: [Experiment Templates](#) <sup>53</sup>

## 5.2 Creating/Saving an Experiment

Each experiment has an identifying name which is specified when it is created/saved. Each name may be used only once per project.

When you create an experiment (ribbon menu item: "Home" or "Project" > "New"), or when you save an experiment under a new name, you are asked for a name. In this case, enter a unique name.

If the "Project view" is activated, you can additionally select the **target project**.

### New Experiment

When you create a **new experiment**, it is generated from an experiment template (see "[Experiment template](#)" <sup>52</sup>).

- If [experiment templates are displayed](#) <sup>52</sup>, select an experiment template.
- If they are not displayed, the [preferred experiment template](#) <sup>53</sup> is used automatically (at default: "**StandardTemplate**").

All changes since the last save are discarded if a new experiment is created.

### Save experiment as

When you save an experiment under a new name, a new experiment having the current settings is created.

- Measurement data from the existing experiment are not transferred along to the new experiment (exception: if the experiment was previously never saved; in that case a prompt appears to ask whether to include these measured data).
- [Files from the folder "Meta"](#) <sup>49</sup> are copied and are available in the new experiment.

## 5.3 Experiment Templates

When you create a new experiment, it is generated from an experiment template.

The new experiment contains all properties of the selected template. In templates, all settings which are saved will be saved also in an experiment.

After the first installation or after creating a new project, the project contains an "empty" experiment template.

## Making experiment templates visible

To be able to use experiment templates, you must first make **experiment templates visible**. This option is deactivated by default.

- Select from the menu "Extra" > "Options"
- In the Options dialog select "Project Management" > "General options"

### Note

- Only activate this function if you wish to create multiple similar experiments.
- If this function is deactivated, some dialogs are displayed in simplified form (e.g. "New experiment" without experiment template selection, among other things).


## Creating experiment templates

Ensure that experiment templates are visible.

You can generate experiment templates from a variety of sources:

Source	Description
From present settings	The configuration currently set is used for the template.
From existing experiment	Select an experiment from which to generate the template.
From default settings	An empty template is created.

- Select the project (if the projects are not displayed, click on the white background, in order to avoid selecting an experiment)
- Click on the button: "Manage Projects"

Menu ribbon	View
Project > Manage Project (  )	Complete

- In the dialog, click on the menu item: "New" > "Add experiment template"
- Select a source

The experiment template is created from the source and and is available when [creating an experiment](#)<sup>52</sup>.

## Preferred experiment template

You can **mark** an experiment template **as preferred** (template context menu > "Set as preferred experiment template").

If the experiment templates are no longer displayed, the new preferred experiment template is automatically used when a new experiment is created.


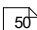

## 6 Ribbon

### 6.1 Project Menu


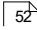



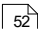
The "Project" menu is available in every plug-in.

Some of the dialogs offer an extended view. By default, the dialogs are displayed without "project view" and "experiment templates".


#### Project

Menu item	Description
 <a href="#">Manage Projects</a> 	Managing projects and experiment templates
 Save Project	Saves the current project



#### Experiment

Menu item	Description
 <a href="#">New</a> 	Creates a new experiment
 Open	Opens an existing experiment
 Save	Saves the current experiment
 <a href="#">Save as</a> 	Saves the current experiment under a new name. Additionally, the experiment is reset. The variables are assigned the respective initial value (e.g. device variables = "0", or user-defined variables are assigned the respective initial value specified). The event " <i>Experiment_Loaded</i> " is triggered.

#### Im-/Export

Menu item	Description
 Import / Export	In this dialog you can import and export various components.

#### Measurement Data

Menu item	Description
 Save current Measurement Data	In addition to the optional automatic data saving, you can also perform targeted saving of the data currently in the PC (Current measurement) either during or subsequent to the measurement.
 Save current Measurement Data as	See also Setup - Advanced Device Functions: " <i>Storage Options and Directory Structure</i> " > " <i>Controlling Data Storage</i> " > " <i>Targeted Data Saving, or Saving Subsequent to Measurement</i> "



## Note

## Without imc STUDIO Project Management

In the product configuration, the component "**imc STUDIO Project Management**" can be deactivated. This is always the case in imc STUDIO Monitor, for example.

If "**imc STUDIO Project Management**" is deactivated, a number of limitations apply.


Among others, there is no longer any database. The dialogs for saving and opening experiments match the standardized "Save As"- or "Open"-dialogs. Experiments can be saved at any desired location. The saved measurement data are stored in the designated experiment folder.

The functions of the Project Management are listed in the Technical Spec Sheet.





The description of the Project- and Experiment-dialogs in the following pages pertain to imc STUDIO with activated Project Management.

## Changes in the menu without imc STUDIO Project Management:

### Project - without Project Management


Menu item	Description
 Save Project	Saves the current project. In this case, all "Project"-settings are saved as "Application"-settings and apply for all experiments.

### Experiment - without Project Management

Menu item	Description
 New experiment	Creates a new experiment. The storage location is first determined by means of "Save experiment/Save experiment as". The device currently selected remains selected. However, the device's configuration will be reset.
 Open experiment	Opens an existing experiment. The experiment can be saved anywhere in the file system.
 Save experiment	Saves the current experiment at the storage location previously set using "Save experiment as"; if no storage location had been determined yet, "Save experiment as" is run automatically.
 Save experiment as	Saves the current experiment under an arbitrary name at any location in the file system

## 7 Navigation Pane and Quick Access Toolbar

### Navigations pane

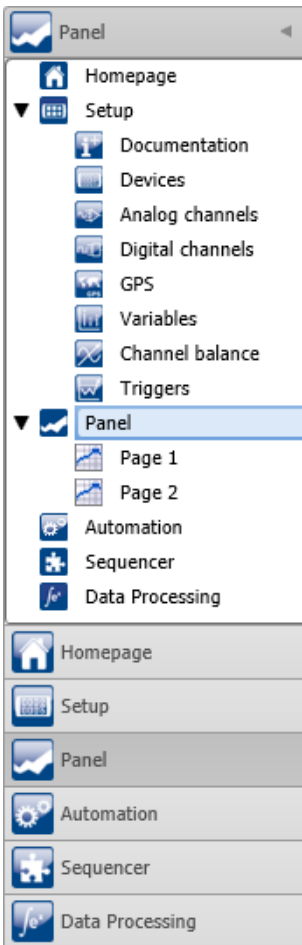

Maximized Navigation Pane  
(example)

In the **Navigation pane**, the main windows of the installed plug-ins are displayed as a tree diagram. To open/change the main window, click on its corresponding entry.

The Navigation pane can be opened or closed, maximized and minimized.



- To **maximize/minimize** the Navigation pane, click in its top bar on the arrow symbol.
- To **open/close** the Navigation pane, click on the upper region of it below the arrow.

If the Navigation pane is maximized or opened, the main windows are additionally displayed as a tree diagram (see example shown).

Via the tree diagram, it is possible to jump to different main windows or directly to the pages containing the main windows. Using the arrow symbols (▶ ▼) which are in front of the main windows, the tree diagram branch can be expanded/collapsed.

#### You can hide the Navigation pane.

If you hide the Navigation pane, please note that your ability to navigate between the main windows. For this case, you should add the command: "*Browse workspace*" at suitable locations, for instance in the ribbon menu ("User-defined buttons").

To show or hide the Navigation pane use the dialog: "[Tool windows chooser](#)"<sup>58</sup>.

### Quick access toolbar

The "Quick access toolbar" can be supplemented with various menu items. Which actions are available for this purpose doesn't depend on what tab is currently displayed in the menu ribbon.

Using the context menu, you can either add or remove menu actions.

- Adding: context menu of the menu item in the menu ribbon (note: the menu ribbon may not be minimized)
- Removing: context menu of the menu item in the toolbar

You may place the toolbar either above or below the menu ribbon.



#### Note

#### Saving the configuration


The **configuration of the "Quick access toolbar"** is saved with the respective **view**.

The configuration is **only saved** whenever the **project is saved**.



## 8 Tool Windows

Tool windows contain special elements for operating/viewing a main window. (For information on operating the tool window: "[Operation](#)"<sup>57</sup>)



Five tool windows

- The imc STUDIO frame's log book

- Four additional windows from the main window imc STUDIO Panel

One tool window belongs to the imc STUDIO frame and is always available:

- [Logbook](#)<sup>59</sup>

The *Logbook* is always displayed and can be minimized. The other main windows' tool windows (e.g. for the Panel) are displayed as soon as the respective main window is opened.




Note

Not all tool windows are visible

By default, all necessary tool windows are displayed. All others can be [displayed](#)<sup>57</sup>, if you need them.

### 8.1 Operation

Tool windows contain special elements for operating and editing a main window.

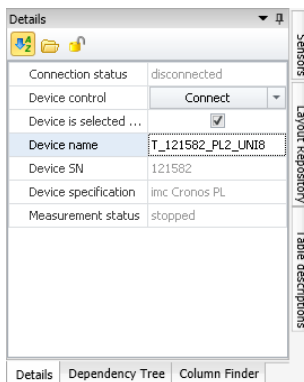

Tool window (example)

Each main window has its own tool window, which is described in the documentation of the respective component. Tool windows can be moved and deleted.

By default, the tool windows are pinned to the main window (e.g. at the bottom or right margin).

The picture shows an opened tool window ("*Details*"). It is pinned and contains two additional tabs. If you click on one of these tabs, the corresponding tool window opens ("*Dependency Tree*" and "*Column Finder*").


Three other collapsed tool windows are seen at the right margin ("*Sensors*", "*Layout Repository*" and "*Table descriptions*").


A tool window is opened when the mouse is swiped over it.

As long as a tool window is selected, or if the mouse is located over the tool window, the tool window remains open. Otherwise, it collapses to the side.

## Showing/hiding the tool window

You can either show or hide tool windows. To do this, open the dialog: "Tool window chooser"

- use the ribbon "View" > "Tool windows", or
- the button (  ) in one of the present tool windows.

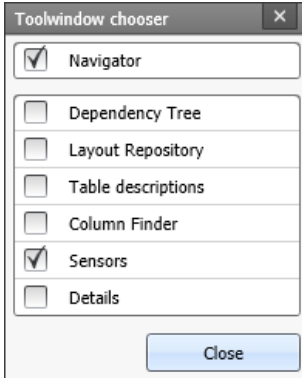

Dialog: Tool windows chooser

The dialog: Tool window chooser opens.

Set a checkmark in front of the tool windows which you wish to have displayed.

## Pinning the tool window

Tool windows can be pinned. Pinned tool windows remain open even when no longer selected.

In order to pin a tool window, click on the thumbtack-button (  ).

## Freely positioning the tool window

In order to freely position the pinned tool window, move the tool window's title bar using drag and drop to the desired position.

## Docking the tool window

In order to dock the tool window, use the drag and drop technique by grabbing the tool window's by its title bar and moving it to the desired position. A Dock-symbol will appear at the locations which are possible.



In the center of the targeted window (main window or tool window), a cross appears. To dock the tool window, release the mouse button with the mouse over the desired position.



Dock at the top/bottom margin



Dock at the left/right margin



Insert as a tab in a different window (see example)


## 8.2 Logbook

In the tool window "Logbook", messages of the categories: "Fatal" (☹), "Error" (❗), "Warning" (⚠) and "Information" (ℹ) are entered. The logbook entries indicate what problems and errors exist and provide hints on where to find them and how to remedy them. Some actions performed are documented.

E.g., a note is entered in the logbook for every command performed:

- performed successfully ("Information") or
- otherwise "Error" or "Warning"

By default, the Logbook is opened when an entry any of the categories "Fatal", "Error" or "Warning" occurs. By default "Information" category notes are entered into the logbook without any further effect.

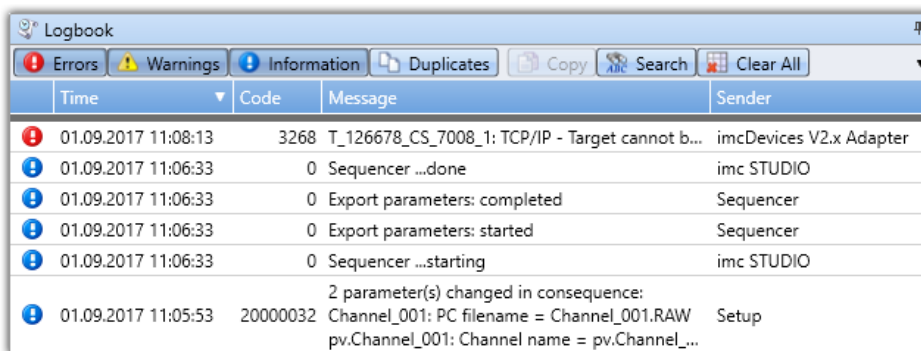

Example of logbook entries

Each logbook entry consists of:

Parameter	Description
Symbol for the category	Fatal (☹), Error (❗), Warning (⚠) and Information (ℹ)
Time	Time the logbook entry occurred
Code	Logbook entry's error code
Message	Exact description of the logbook entry
Sender	The origin of the logbook entry

After a new imc STUDIO start, the logbook is empty. The logbook itself only displays messages which occurred since the last start. Older messages can be opened with the "Logbook-Viewer".

## 9 Views

The program's GUI is adaptable, so that for example the windows and columns can be positioned and displayed according to the user's desires. **The layout of the GUI is saved** in so-called "Views". It is possible to create separate views for various requirements.

The following settings are saved along with a view:

Region	Description
Window arrangement	The imc STUDIO window's and the tool window's <b>position and size</b>
Menus	Layout of the <b>menu ribbon</b> and the <a href="#">Quick access toolbar</a> <sup>56</sup>
Layout	<ul style="list-style-type: none"> <li>The last main window opened</li> <li>The tool window's layout (e.g. what metadata columns are displayed in the Data Browser)</li> <li>The arrangement and configuration of the Setup pages (e.g. arrangement of columns, such as metadata columns)</li> </ul>





### Note

Please note that only the positions of individual elements is saved. The existence and configuration, for instance, of the Setup-columns (tables- and column descriptions) is saved along with the respective project.

**When you save a view, the whole project is also saved.** This includes the current configuration of the columns.

### Saving views

In order to save the current view, select the menu item "Save View (as)":

Menu item	View
View > Save View / Save View as (  / 	Complete
Extra > Save View / Save View as (  / 	Standard, Compact

All settings belonging to the current view are saved. These include the items named above.

### Note

#### The views are saved with the project

The views are saved with their respective project. When a view is saved, it is necessary for the project to be saved. The system will notify the user accordingly.

Along with the project, additional settings are saved along with it, which affect the views:

- Setup table descriptions and column descriptions (these include, for example, additional columns, such as metadata-columns, parameter set columns, ...) (tool window: Table Descriptions)
- saved Setup complete layouts (tool window: Layout Repository)

## Loading views

In order to load a saved view, select the menu item "View" in the drop-down list of the respective view. Here, all views available to the project are displayed.

After the selection the view is loaded.

The record of an experiment includes the view in which the experiment was saved. When the experiment is loaded, the view also loads automatically.

## Deleting views

To delete a saved view, select the menu item "Delete View".

Menu item	View
View > Delete View (🗑️)	Complete
Extra > Delete View (🗑️)	Standard, Compact

In the dialog which then opens, select the view to delete from the drop-down list. Confirm your selection by clicking on "Save project".

## Restoring views

Views are not write-protected. They can be restored to their original state. The factory settings come with a copy of all views created as part of the program installation.


To restore a view from the factory settings, select the menu item "Restore".

Menu item	View
View > Restore (🔄)	Complete
Extra > Restore (🔄)	Standard, Compact

In the dialog which then opens, select the desired views. They are imported from the factory settings. Confirm your selection by clicking on "OK".

## 9.1 Exporting/importing views

When you export the view settings, a variety of project settings are stored in the export file.

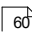Settings	Description
<a href="#">Saved views</a> 	<ul style="list-style-type: none"> <li>table descriptions and column descriptions (these include, for example, additional columns, such as "metadata columns", "parameter set columns", ...) (tool window: "Table Descriptions")</li> <li>saved complete layouts (tool window: "Layout Repository")</li> </ul>
Sensors	<ul style="list-style-type: none"> <li>user-defined characteristic curves/sensors (tool window: "Sensors")</li> </ul>

## Export of views, metadata columns, sensors, ...

By means of the menu item "*Import/Export*", you can export the view settings:

Menu item	View
Project > Import / Export (🔄)	Complete
Extra > Import / Export (🔄)	Standard, Compact

- Choose option "*Export*" and then the list item "***Export views, meta data columns, sensors, ...***"
- Choose an appropriate file name and path for the view settings file



### Note

### Save the view beforehand

Save the view beforehand if you have made any changes (see "[Views](#)"<sup>60</sup>).


## Import of views, metadata columns, ...

Using the menu item "*Import/Export*", you can **import the view settings to the current project**:

Menu item	View
Project > Import / Export (🔄)	Complete
Extra > Import / Export (🔄)	Standard, Compact

- Choose option "*Import*" and then the list item "***Import views, meta data columns, ...***"
- In the file selection dialog, selected the saved view settings file


Thereafter you will see a dialog allowing you to import either all or individual view settings.

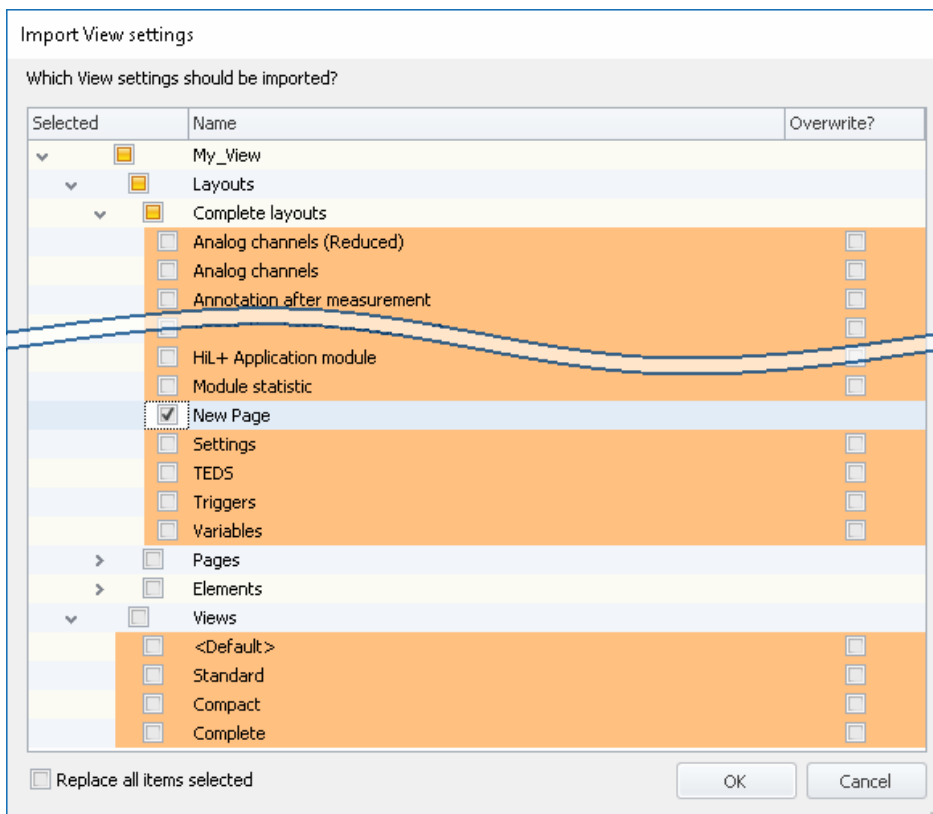

Entries having **colored shading already exist** in the current project. In this example, the complete layout "New Page" is not yet present there.

Checkbox	Description
Selected (left)	Check this box if you wish to <b>import the element</b>
Overwrite? (right)	Check this box if the element in the project is to be <b>overwritten without any confirmation prompt</b> . If the box is not check-marked, a prompt appears to inquire the name for the element to be imported. (Unless "Replace all items selected" is check-marked.)
Replace all items selected	Corresponds to "Overwrite?" for all entries: Check this box if you want to <b>replace all elements without any confirmation prompt</b> .

**You can select the following elements:**

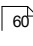Element	Description
Layouts	All these elements belong to the Setup pages. Saved pages and saved designs, which can be displayed on the pages. For more information on the complete layouts, see the chapter: " <i>Table Description and Complete Layout</i> "
Views	Here you find the imc STUDIO-views. The <a href="#">views</a>  apply for all components of imc STUDIO.



## Note


## New functions can be overwritten

Be aware that when making replacements, new functions may be lost if you import old views/columns.

## Importing defined additional columns

An additional prompt appears if

- discrepancies between existing **Setup columns** were detected or
- the file contains **additional columns**.

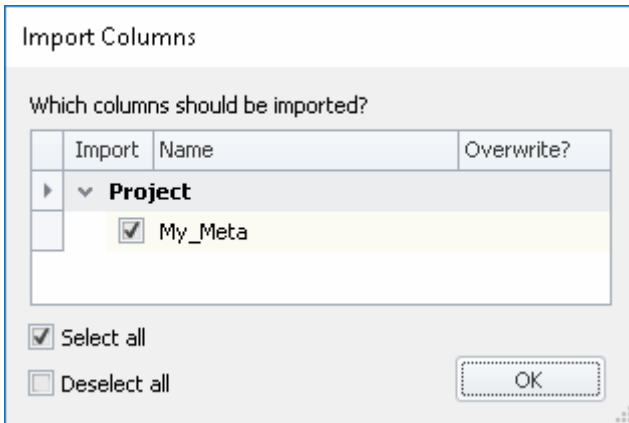

Select which columns to import and/or any to replace.

If the **column already exists**, a checkbox appears under "Overwrite?". If the box is not check-marked, the **column is automatically renamed**. You can edit the name afterward. For more information, see the chapter: "*Creating and configuring additional columns*".



## Index

### A

- Add device 36, 40
- Additional columns
  - export 61
  - import 61
  - save 60
- Auto: installation type 20

### C

- CE Certification 6
- Certificates 6
- Change requests 6
- Characteristic curves
  - export 61
- Column description
  - save 60
- Column descriptions
  - export 61
  - import 61
- Complete layouts
  - export 61
  - import 61
- Components
  - Product configuration 26
- connect device 36, 38
- Connecting via LAN in four steps 36
- Connection
  - to Device 30
- Conversion 48
  - Database 15
- Customer Support 7

### D

- Database conversion 15
- Database folder 48
- Datenbase
  - conversion 48
- Delete
  - Experiment 51
  - Project 51
  - Views 61
- Demo: installation type 20
- Device
  - add 36, 40
  - connect 36, 38
  - connection 30
- DIN-EN-ISO-9001 6

### E

- Error (Logbook) 59
- Experiment 47, 51
  - Delete 51
  - Export 51
  - Import 51
  - new 52
  - save (as) 52
- Experiment from template
  - new 52
- Experiment new 50
- Experiment template 49, 51, 52
  - Export 51
  - Import 51
  - new 51
  - Preferred 53
- Export
  - Experiment 51
  - Experiment template 51
  - Project 51
- Export of views, metadata columns, sensors, ... 61

### F

- Fatal (Logbook) 59
- Firewall
  - Security alert 30
- Firmware update 43
  - Logbook 43
- Firmware version 42

### G

- General terms and conditions 6
- Guarantee 6

### H

- Homepage 29
- Hotline 7

### I

- imc Language Selector 33
- imc Software License Agreement 8
- imc LICENSE Manager 26
- imcDB://DB 50
- Import
  - Experiment 51
  - Experiment template 51
  - Project 51
- Import / Export
  - Menu 54
- Import of views, metadata columns, ... 61
- Information (Logbook) 59

Installation 13  
  imc DEVICES 24  
  imc FAMOS 24  
  imc Format Converter 21  
  imc SENSORS 23  
  imc Shared Components 22  
  imc STUDIO 23  
  McAfee 16  
  Step by step 17  
  Update 13  
  User account control 16

IP address  
  of the PC 36

IP-address  
  configure 36, 38  
  of the devices 36, 38  
  of the PCs 36

ISO-9001 6

## J

Jiggling display 34

## L

Language change 33  
Language installing 33  
Layout-Repository  
  export 61  
  import 61  
Licensable plug-ins 26  
License 26  
Limited Warranty 6

Load  
  Views 61

Logbook 59  
  Category 59  
  Code 59  
  Firmware update 43  
  Location 59  
  Message 59  
  Sender 59

Logbook category  
  Error 59  
  Fatal 59  
  Information 59  
  Warning 59

## M

Main window 31  
Manage Project 50  
Manage Projects 54  
McAfee 16  
Measurement data 47

Metadata 51  
Metadata-column  
  export 61  
  import 61

## N

Navigation Pane 31, 56  
Necessary system component  
  Installation 21  
Network  
  Firewall 30  
  Optimize 40

New  
  Experiment 52, 54  
  Experiment from template 52  
  Experiment template 51  
  Project 51, 54  
New experiment 50, 52  
  from template 52  
  save (as) 52

## O

Open 50  
Open experiment 54  
Optional components 26

## P

Parameter set columns  
  export 61  
  import 61  
Plug-in 31  
  Info 32  
  Version information 32  
Preferred experiment template 53  
Product  
  Configuration 26  
  Edition 26  
  Info 32  
  Licensing 26  
  Version information 32  
Product configuration 26  
  Changing 26  
Product improvement 6  
Project 47, 51  
  Delete 51  
  Export 51  
  Import 51  
  new 51  
Project Menu  
  Import / Export 54  
  Manage Projects 54  
  New experiment 54

## Project Menu

- Open experiment 54
- Save current Measurement Data (as) 54
- Save experiment (as) 54
- Save Project 54

**Q**

- Quality Management 6
- Quick access toolbar 56

**R**

## Restore

- Views 61

**S**

## Save

- Experiment 52, 54
- Project 54
- Views 60

## Save as 50

- Experiment 54

## Save current Measurement Data (as) 54

## Save experiment (as) 54

## Save Project 54

## Save/load view settings

- additional columns 60
- column descriptions 60
- metadata columns 60
- parameter set columns 60
- table descriptions 60
- window arrangements 60

## Security alert 30

## Sensors

- export 61

## Service: Hotline 7

## Set as preferred experiment template 53

## Software

- Installation 13
- Uninstall 13
- Update 13

## Start page 29

## Starting imc STUDIO 28

## System requirements

- Hard drive 12
- Operating System 12
- Storage 12
- Windows 12

**T**

## Table descriptions

- export 61
- import 61

- save 60

## Telephone numbers: Hotline 7

## Tool window 31, 57

- Docking 58
- Freely positioning 58
- Hiding 58
- Operation 57
- Pinning 58
- Showing 58

## Tool window chooser 58

**U**

## UAC 16

## Uninstall 13

## Update

- Backup View settings 15
- Database 15
- Restore View settings 15

## User account control 16

## User-defined: Installation type 21

**V**

## Version information 32

## Version of the firmware 42

## View settings export/import 61

## Views 60

- Delete 61
- Load 61
- Restore 61
- Save (as) 60

## Views, metacolumns, sensors, ... 61

## Virus scanner 34

**W**

## Warning (Logbook) 59

## Warranty 6

## window arrangements

- export 61
- import 61
- Load 60
- Save 60

## Windows

- Firewall 30
- Security Alert 30
- User account control 16